


# HEALTH, SAFETY AND ENVIRONMENT INSTRUCTIONS FOR FAN COIL UNITS AND HELIOTHERMS


EN/ Read the instruction manual before installation



## Handling

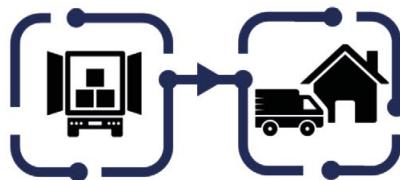


## Delivery

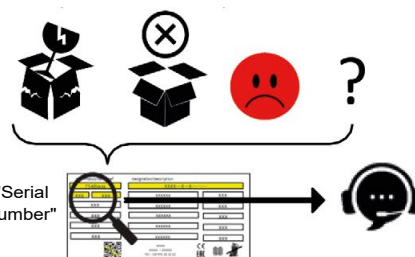

## Installation



## Storage

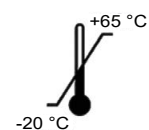

### **Safety – To be read before any installation or use of the unit**

---

Children and persons with limited physical, sensory or mental capabilities must not use the unit without supervision.

---

The power supply to the unit must include an omnipolar disconnection device within the installation which will ensure a complete disconnection under overvoltage category III conditions.

---

The unit must be disconnected from all the power supplies connected to the unit and its accessories before any intervention.

---

The unit must be installed in accordance with the national rules governing electrical installation.

---

The unit must be secured in accordance with the instruction manual.

---

If the unit has heating elements, the minimum air flows recommended in the instructions must be respected.

---

## Техника для климата

Доставляем оборудование по всей России от 3 дней транспортными компаниями. Реализуем проекты в десятках регионов — от Калининграда до Владивостока.

**9600+**

объектов и поставок

**от 1 дня**

отгрузка в транспортную компанию

### Технические данные файла

Документ: Инструкция Carrier 42GW/42N: охрана труда, здоровья и окружающей среды для фанкойлов (EN7655438), 09.2024

Идентификатор библиотеки: LIB-003924

Исходный файл: carrier-en7655438-00-09-2024-eh-s-tfcu-heliotherme-instruktsiya.pdf

SHA-256 оригинала: 41e2711412f4c7055b255572485fd13e4d74161459d2a8d8a3cea83138c3c617

Постоянная ссылка:

<https://iclim.ru/library/carrier-en7655438-00-09-2024-eh-s-tfcu-heliotherme-instruktsiya.pdf>

Копия сформирована: 01.10.2026 22:55 UTC