


DAIKIN

INSTALLATION MANUAL

R32 Split Series

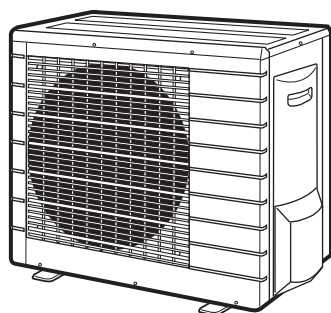

Models

RXM42LV1B

RXM50LV1B

RXJ50LV1B

RXM42MV1B

RXM50MV1B

RXJ50MV1B

ARXM50MV1B

CE - DECLARATION-OF-CONFORMITY
CE - KONFORMITÄTSSERKLÄRUNG
CE - DECLARATION-DE-CONFORMITE
CE - KONFORMITEITSVERKLARING

CE - DECLARACION-DE-CONFORMIDAD
CE - DICHIARAZIONE-DI-CONFORMITA
CE - ΔΗΛΩΣΗ ΣΥΜΜΟΡΦΩΣΗΣ

CE - DECLARAÇÃO-DE-CONFORMIDADE
CE - ЗАЯВЛЕНИЕ-О-СОТВЕТСТВИИ
CE - ÖVERENSSTÄMMELSESRÖKLERING
CE - FÖRSÄKRAN-OM-ÖVERENSSTÄMELSE

CE - IZJAVA-O-USKLADNOSTI
CE - ILMOITUS-YHDENMUKAISUDESTA
CE - PROHLÁŠENÍ-O-SHOĐE

CE - IZJAVA-O-USKLADNOSTI
CE - MEGFELELŐSÉG-NYILATKOZAT
CE - DEKLARACIJA-ZGODNOSTI
CE - DECLARAȚIE-DE-CONFORMITATE

CE - IZJAVA O SKLADNOSTI
CE - VASTAVUSDEKLARACIJA
CE - DEKLARACIJA-3A-CЪОТВѢТСТВІЕ

CE - ATTIKITIES-DEKLARACIJA
CE - ATBILSĪBAS-DEKLARACIJA
CE - VYHLÁŠENIE-ZHODY
CE - UYGUNLUK-BEYANI

Daikin Industries Czech Republic s.r.o.

- 01 (GB) declares under its sole responsibility that the air conditioning models to which this declaration relates:
02 (D) erklärt auf seine alleinige Verantwortung daß die Modelle der Klimaanlage für die diese Erklärung bestimmt ist:
03 (F) déclare sous sa seule responsabilité que les appareils d'air conditionné visés par la présente déclaration:
04 (NL) verklaart hierbij op eigen exclusieve verantwoordelijkheid dat de airconditioning units waarop deze verklaring betrekking heeft:
05 (E) declara bajo su única responsabilidad que los modelos de aire acondicionado a los cuales hace referencia la declaración:
06 (I) dichiara sotto sua responsabilità che i condizionatori modello a cui è riferita questa dichiarazione:
07 (GR) δηλώνει με αποκλειστική της ευθύνη ότι τα προϊόντα των κλιματιστικών μονοτέρων στο οποία αναφέρεται η παρούσα δήλωση:
08 (C) declara sob sua exclusiva responsabilidade que os modelos de ar condicionado a que esta declaração se refere:

RXM20LV1B, RXM25LV1B, RXM35LV1B, RXM42LV1B, RXM50LV1B, RXJ20LV1B, RXJ25LV1B, RXJ35LV1B, RXJ50LV1B

01 are in conformity with the following standard(s) or other normative document(s), provided that these are used in accordance with our instructions:
02 (den folgenden Normen) oder einem anderen Normdokument oder -dokumenten entspricht/entsprechen, unter der Voraussetzung, daß sie gemäß unseren Anweisungen eingesetzt werden:

03 sont conformes à la(s) norm(e)(s) document(s) normatif(s), pour autant qu'ils soient utilisés conformément à nos instructions:
04 conform de volgende norm(en) of één of meer andere bindende documenten zijn, op voorwaarde dat ze worden gebruikt overeenkomstig onze instructies:

05 están en conformidad con la(s) siguiente(s) norma(s) u otro(s) documento(s) normativo(s), siempre que sean utilizados de acuerdo con nuestras instrucciones:

06 sono conformi all(i) seguente(i) standard(s) o altro(i) documento(i) a carattere normativo, a patto che vengano usati in conformità alle nostre istruzioni:
07 éva egyezményre írt (o)(k) szabvány(ok) irányszabvány(ok) (v) más irányszabvány(ok) alapján, amennyiben a vonatkozó irányszabvány(ok) pontosan betartásra kerülnek:

EN60335-2-40,

- 01 following the provisions of:
02 gemäß den Vorschriften der:
03 conformément aux stipulations des:
04 overeenkomstig de bepalingen van:
05 siguiendo las disposiciones de:
06 secondo le prescrizioni per:
07 με την προϋπόθεση των διατάξεων των:
08 de acordo com o previsto em:
09 в соответствии с положениями:

- 01 Note * as set out in <A> and judged positively by
02 Hinweis * wie in <A> aufgeführt und von positiv beurteilt
03 Remarque * tel que défini dans <A> et évalué positivement par conformément au Certificat <C>
04 Bemerk * zoals vermeld in <A> en positief beoordeeld door overeenkomstig Certificat <C>
05 Nota * como se establece en <A> y es valorado positivamente por de acuerdo con el Certificado <C>
06 Nota * jak uznané v <A> i pozitivně zjištěno v souladu s ověřením <C>
07 Znamenje * kako je izloženo u <A> pozitivno ocijenjeno od strane prema Certificatu <C>
08 Nota * delinatio nel <A> e giudicato positivamente da secondo il Certificato <C>
09 Nota * omyu kobotvrdzo mo <A> kn kvalitu bndk omy to oduvdu mo to pozitivno <C>
10 Nota * tal como estabelecido em <A> e com o parecer positivo de de acordo com o Certificado <C>
11 Nota * tak uzvano e <A> i pozitivno zjišeno v skladu s ovērenim <C>
12 Napomena * kako je izloženo u <A> pozitivno ocijenjeno od strane prema Certificatu <C>

- 01** D1CZ*** is authorised to compile the Technical Construction File.
02** D1CZ*** hat die Berechtigung die Technische Konstruktionsakte zusammenzustellen.
03** D1CZ*** est autorisé à compiler le Dossier de Construction Technique.
04** D1CZ*** is bevoegd om het Technisch Constructiedossier samen te stellen.
05** D1CZ*** está autorizado a compilar el Archivo de Construcción Técnica.
06** D1CZ*** è autorizzata a redigere il File Tecnico di Costruzione.

***D1CZ = Daikin Industries Czech Republic s.r.o.

09 (RU) заверяет, исключительно под свою ответственность, что модели кондиционера воздуха, к которым относится настоящее заявление:

10 (SK) erklærer under enskrævelse, at klimaanlægsmodelle, som denne deklaration vedrører:

11 (S) deklarerar egenskap av huvudsaken, att luftkonditioneringsmodellerna som betörs av denna deklaration innefattar att:

12 (N) erklærer fuldstændig ansvar for at de luftkonditioneringsmodeller som berøres af denne deklaration, inneholder at:

13 (HU) ímroltat yksmonai omalla vastuulutan, että tämän ilmoituksen laatuohjeita sisältävien mallit:

14 (CZ) prohlašuje ve své plné odpovědnosti, že modely klimatizace, k nímž se toto prohlášení vztahuje:

15 (HB) izjavljue pod isključivo vlastitom odgovornošću da su modeli klima uređaja na koje se ova izjava odnosi:

16 (H) teljes felelősségre tudatában kijelent, hogy a klímaberendezés modellek, melyekre e nyilatkozat vonatkozik:

08 estão em conformidade com a(s) seguinte(s) norma(s) ou outro(s) documento(s) normativo(s), desde que estes sejam utilizados de acordo com as nossas instruções:
09 соответствует следующим стандартам или другим нормативным документам, при условии их использования согласно нашим инструкциям:

10 overholder følgende standard(er) eller andre/andre retningsgivende dokument(er), forudsat at disse anvendes i henhold til vore instrukser:

11 respektive uttushing är utförd i överensstämmelse med och följer följande standard(er), förutsat att dessa användes i enlighet med instrukserna:

12 respektive uslyer er i overensstemmelse med følgende standard(er) eller andre normgivende dokument(er), under forudsætning af anvendelse af disse brugs i henhold til vore instrukser:

13 uastavaq, seuraavaan standardin ja muiden ohjeistettujen dokumenttien vaatimuksia edellytettään, että niitä käytetään ohjeiden mukaisesti:

14 za predpoklad, že jsou využívány v souladu s našimi pokyny, odpovídají následujícími normám nebo normativním dokumentům:
15 u skladu sa sljedećim standardom(ima) ili drugim normativnim dokumentom(ima), uz uvjet da se oni koriste u skladu s našim uputama:

**Low Voltage 2006/95/EC
Machinery 2006/42/EC **
Electromagnetic Compatibility 2004/108/EC ***

- 11 Information * enligt <A> och godkänns av enligt Certifikat <C>
12 Merk * som det fremkommer i <A> og gennem positiv bedømmelse av ifølge Certificat <C>
13 Huom * jotta on esitetty asiakirassa <A> ja jotta on hyväksynyt Sertifikaatin <C> mukaisesti.
14 Poznámka * jak bylo uvedeno v <A> a pozitivně zjištěno v souladu s ověřením <C>
15 Napomena * kako je izloženo u <A> pozitivno ocijenjeno od strane prema Certificatu <C>
16 Mogljivost * alji <A> alagán alji igazolta a megjelölt, alji <C> tanúsítvány szerint.
17 Uwaga * zgodnie z dokumentacją <A> pozytywną opinię wydał Świadectwem <C>
18 Nota * asa cum este stabilit în <A> și aprobat pozitiv de în conformitate cu Certificat <C>
19 Opomba * kol je doobreno v <A> in odobeno s stran v skladu s ovērenim <C>
20 Mäks * nagu on näidatud dokumentis <A> ja heaks kiidetud järgi vastavalt sertifikaadile <C>

- 13** D1CZ*** on valuetult laatinat Teknisen asiakirjan.
14** Společnost D1CZ*** má oprávnění ke kompilaci souboru technické konstrukce.
15** D1CZ*** je ověřen za zřadu Databáze o technické konstrukci.
16** A D1CZ*** jogsall a műszaki konstrukciós dokumentáció összeállítására.
17** D1CZ*** ma upowaznienie do zbierania i opracowywania dokumentacji konstrukcyjnej.
18** D1CZ*** este autorizat să compileze Dosarul Tehnic de construcție.

- 17 (EL) deklarije na vlastnu odgovornost, da modele klimatizatorov, ktorých dotyczy nižšieja deklarácia:
18 (BG) deklarija pe proprie răspundere că aparatele de aer condiționat la care se referă această declaratie:
19 (CS) z viso odgovorností zjavuji, da so modely klimatiských naprav, na ktoré sa távja nariadenie:
20 (CZ) kinnibit oma täieliku vastutuse, et käesoleva deklaratsiooni alla kuuluvad klimateadmetele mudelid:
21 (BG) deklarijam na ocon otopoznosti, et konditsionirniatnitsata, za koto se otnasat zav popynuvay:
22 (CZ) všeka savo atsakomybe skieba, kad oro kondicionavimo prietaisų modeliai, kuriems yra taikoma šis deklaracija:
23 (LV) ar pilni atbildību apliecinu, ka tālāk uzskaitīto modeļu gaisa kondicionētāji, uz kuriem attiecas šī deklarācija:
24 (SK) vyhlasje na vlastnu zodpovednost, že tieto klimatizačné modely, na ktoré sa vzťahuje toto vyhlásenie:
25 (TR) lanamen kendi sorumluluğunda olnak üzere bu bildirimi ilgili klima modellerinin aşağıdaki gibi olguluğunu beyan eder:

- 16 megjelölnek az alábbi szabvány(ok) vagy egyéb irányadó dokumentum(ok)nak, ha azokat előírás szerint használják:
17 spełniać wymogi następujących norm i innych dokumentów normalizacyjnych, pod warunkiem że używane są zgodnie z naszymi instrukcjami:
18 sunt în conformitate cu următorul (următoarele) standard(e) sau altele documente(n) normative, cu condiția ca acestea să fie utilizate în conformitate cu instrucțiunile noastre:
19 skladni z naslednjimi standardi in drugim normativi, pod pogledom, da se uporabljajo v skladu z našimi navodili:
20 v skladu s naslednjimi jrgnimi (vse standardi) jeva vsi teiste normalizativne dokumente, ki neč kasati se v skladu s našimi navodili:
21 соответстват на следните стандарти или други нормативни документи, при условие, че се използват съгласно нашите инструкции:
22 alinika žamau nurobiutų standartus (ir) kitus kitus norminius dokumentus su sąlyga, kad yra naudojami pagal mūsų nurodymus:
23 tad je liekti atbilstošs ražbiļa norādījumiem, atbilst sekošiem standartiem un citiem normatīviem dokumentiem:
24 su v z hode s nasledovny(m) normou(m) alebo nym(n) normatívnym(i) dokumentom(ami), za predpokladu, že sa používajú v súlade s našimi návodmi:
25 ünün, talimatlarına göre kullanılması koşuluyla aşağıdaki standartlar ve norm belirlen belgelerine uyumludur:

- 10 Direktiver, med senere ændringer.
11 Direktiv, med foretagne ændringer.
12 Direktiver, med foretagne ændringer.
13 Direktiveja, sađasna kun ne ovat muuttuneita.
14 v planem zření.
15 Snjerenice, kako je izmjenjeno.
16 řányev(ek) és módosítások rendelkezései.
17 z późniejszych poprawkami.
18 Direktivelor, cu amendamentele respective.
19 Direktive, med senere ændringer.
20 Direktivd koos muudatustega.
21 Директиви, с ресевие изменения.
22 Direktiyo sa papalyngs.
23 Direktivās un to papildinājums.
24 Snemnice, u planom zneni.
25 Dęđšimimis halenyje Yoremliker.

<A>	DAIKIN.TCF.032C/1/11-2014
	DEKRA (NB0344)
<C>	2159619.0551-EMC

- 19** D1CZ*** je pooblaščen za sestavo datoteke s tehnično mapo.
20** D1CZ*** on volitaut koostama tehnilisi dokumentatsiooni.
21** D1CZ*** e otoppapaia da cseravi Akta za tehnicka konstrukciju.
22** D1CZ*** va palida sudaryti šį techninės konstrukcijos failą.
23** D1CZ*** ra autorizats sestadii tehnicko dokumentaciuju.
24** Spoločnost D1CZ*** je oprávnena vytvorit súbor technické konštrukcie.
25** D1CZ*** Teknik Yapı Dosyasını derlenmeye yetkilidir.



Takayuki Fujii
Managing Director
Pilsen, 3rd of Nov. 2014

DAIKIN INDUSTRIES CZECH REPUBLIC s.r.o.

U Nové Hospody 1/1155, 301 00 Píseň Skvrňany,
Czech Republic

Safety Precautions



Read the precautions in this manual carefully before operating the unit.



This appliance is filled with R32.

- The precautions described herein are classified as WARNING and CAUTION. They both contain important information regarding safety. Be sure to observe all precautions without fail.
- Meaning of WARNING and CAUTION notices

- WARNING Failure to follow these instructions properly may result in personal injury or loss of life.**
- CAUTION Failure to observe these instructions properly may result in property damage or personal injury, which may be serious depending on the circumstances.**

- The safety marks shown in this manual have the following meanings:

Be sure to follow the instructions.	Be sure to establish an earth connection.	Never attempt.
-------------------------------------	---	----------------

- After completing installation, conduct a trial operation to check for faults and explain to the customer how to operate the air conditioner and take care of it with the aid of the operation manual.
- The English text is the original instruction. Other languages are translations of the original instructions.

WARNING


• Ask your dealer or qualified personnel to carry out installation work. Do not attempt to install the air conditioner yourself. Improper installation may result in water leakage, electric shocks or fire.	
• Install the air conditioner in accordance with the instructions in this installation manual. Improper installation may result in water leakage, electric shocks or fire.	
• Be sure to use only the specified accessories and parts for installation work. Failure to use the specified parts may result in the unit falling, water leakage, electric shocks or fire.	
• Install the air conditioner on a foundation strong enough to withstand the weight of the unit. A foundation of insufficient strength may result in the equipment falling and causing injury.	
• Electrical work must be performed in accordance with relevant local and national regulations and with instructions in this installation manual. Be sure to use a dedicated power supply circuit only. Insufficiency of power circuit capacity and improper workmanship may result in electric shocks or fire.	
• Use a cable of suitable length. Do not use tapped wires or an extension lead, as this may cause overheating, electric shocks or fire.	
• Make sure that all wiring is secured, the specified wires are used, and that there is no strain on the terminal connections or wires. Improper connections or securing of wires may result in abnormal heat build-up or fire.	
• When wiring the power supply and connecting the wiring between the indoor and outdoor units, position the wires so that the control box lid can be securely fastened. Improper positioning of the control box lid may result in electric shocks, fire or over heating terminals.	
• If refrigerant gas leaks during installation, ventilate the area immediately. Toxic gas may be produced if the refrigerant comes into contact with fire.	
• After completing installation, check for refrigerant gas leakage. Toxic gas may be produced if the refrigerant gas leaks into the room and comes into contact with a source of fire, such as a fan heater, stove or cooker.	
• When installing or relocating the air conditioner, be sure to bleed the refrigerant circuit to ensure it is free of air, and use only the specified refrigerant (R32). The presence of air or other foreign matter in the refrigerant circuit causes abnormal pressure rise, which may result in equipment damage and even injury.	
• During installation, attach the refrigerant piping securely before running the compressor. If the refrigerant pipes are not attached and the stop valve is open when the compressor is run, air will be sucked in, causing abnormal pressure in the refrigeration cycle, which may result in equipment damage and even injury.	
• During pump-down, stop the compressor before removing the refrigerant piping. If the compressor is still running and the stop valve is open during pump-down, air will be sucked in when the refrigerant piping is removed, causing abnormal pressure in the refrigeration cycle, which may result in equipment damage and even injury.	
• Be sure to earth the air conditioner. Do not earth the unit to a utility pipe, lightning conductor or telephone earth lead. Imperfect earthing may result in electric shocks.	
• Be sure to install an earth leakage breaker. Failure to install an earth leakage breaker may result in electric shocks or fire.	

Safety Precautions

⚠ CAUTION	
• Do not install the air conditioner at any place where there is a danger of flammable gas leakage. In the event of a gas leakage, build-up of gas near the air conditioner may cause a fire to break out.	⊘
• While following the instructions in this installation manual, install drain piping to ensure proper drainage and insulate piping to prevent condensation. Improper drain piping may result in indoor water leakage and property damage.	
• Tighten the flare nut according to the specified method such as with a torque wrench. If the flare nut is too tight, it may crack after prolonged use, causing refrigerant leakage.	
• Make sure to provide for adequate measures in order to prevent that the outdoor unit be used as a shelter by small animals. Small animals making contact with electrical parts can cause malfunctions, smoke or fire. Please instruct the customer to keep the area around the unit clean.	
• The temperature of refrigerant circuit will be high, please keep the inter-unit wire away from copper pipes that are not thermally insulated.	
• This appliance is intended to be used by expert or trained users in shops, in light industry and on farms, or for commercial and household use by lay persons.	
• Sound pressure level is less than 70 dB(A).	

Accessories

Accessories supplied with the outdoor unit:

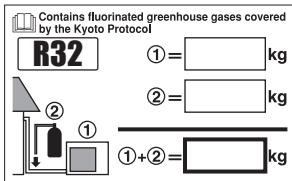(A) Installation Manual	1	 It is on the bottom of the packing case.	1
(C) Refrigerant charge label 	1		
(D) Multilingual fluorinated greenhouse gases label 	1		

Precautions for Selecting the Location

- 1) Choose a place solid enough to bear the weight and vibration of the unit, where the operation noise will not be amplified.
- 2) Choose a location where the hot air discharged from the unit or the operation noise will not cause a nuisance to the neighbors of the user.
- 3) Avoid places near a bedroom and the like, so that the operation noise will cause no trouble.
- 4) There must be sufficient spaces for carrying the unit into and out of the site.
- 5) There must be sufficient space for air passage and no obstructions around the air inlet and the air outlet.
- 6) The site must be free from the possibility of flammable gas leakage in a nearby place.
- 7) Install units, power cords and inter-unit wire at least 3m away from television and radio sets. This is to prevent interference to images and sounds. (Noises may be heard even if they are more than 3m away depending on radio wave conditions.)
- 8) In coastal areas or other places with salty atmosphere of sulfate gas, corrosion may shorten the life of the air conditioner.
- 9) Since drain flows out of the outdoor unit, do not place under the unit anything which must be kept away from moisture.

NOTE

Cannot be installed hanging from ceiling or stacked.

Precautions for Selecting the Location

CAUTION

When operating the air conditioner in a low outdoor ambient temperature, be sure to follow the instructions described below.

- To prevent exposure to wind, install the outdoor unit with its suction side facing the wall.
- Never install the outdoor unit at a site where the suction side may be exposed directly to wind.
- To prevent exposure to wind, it is recommended to install a baffle plate on the air discharge side of the outdoor unit.
- In heavy snowfall areas, select an installation site where the snow will not affect the unit.



- Construct a large canopy
- Construct a pedestal


Install the unit high enough off the ground to prevent burying in snow.

Outdoor Unit Installation Drawings

Max. allowable piping length	30m
** Min. allowable piping length	1.5m
Max. allowable piping height	20m
* Additional refrigerant required for refrigerant pipe exceeding 10m in length.	20g/m
Gas pipe	O.D. 12.7mm
Liquid pipe	O.D. 6.4mm




* Be sure to add the proper amount of additional refrigerant.
Failure to do so may result in reduced performance.

** The suggested shortest pipe length is 1.5m, in order to avoid noise from the outdoor unit and vibration.
(Mechanical noise and vibration may occur depending on how the unit is installed and the environment in which it is used.)
When connecting the FVXS indoor unit, the shortest piping length should be no less than around 2.5m.

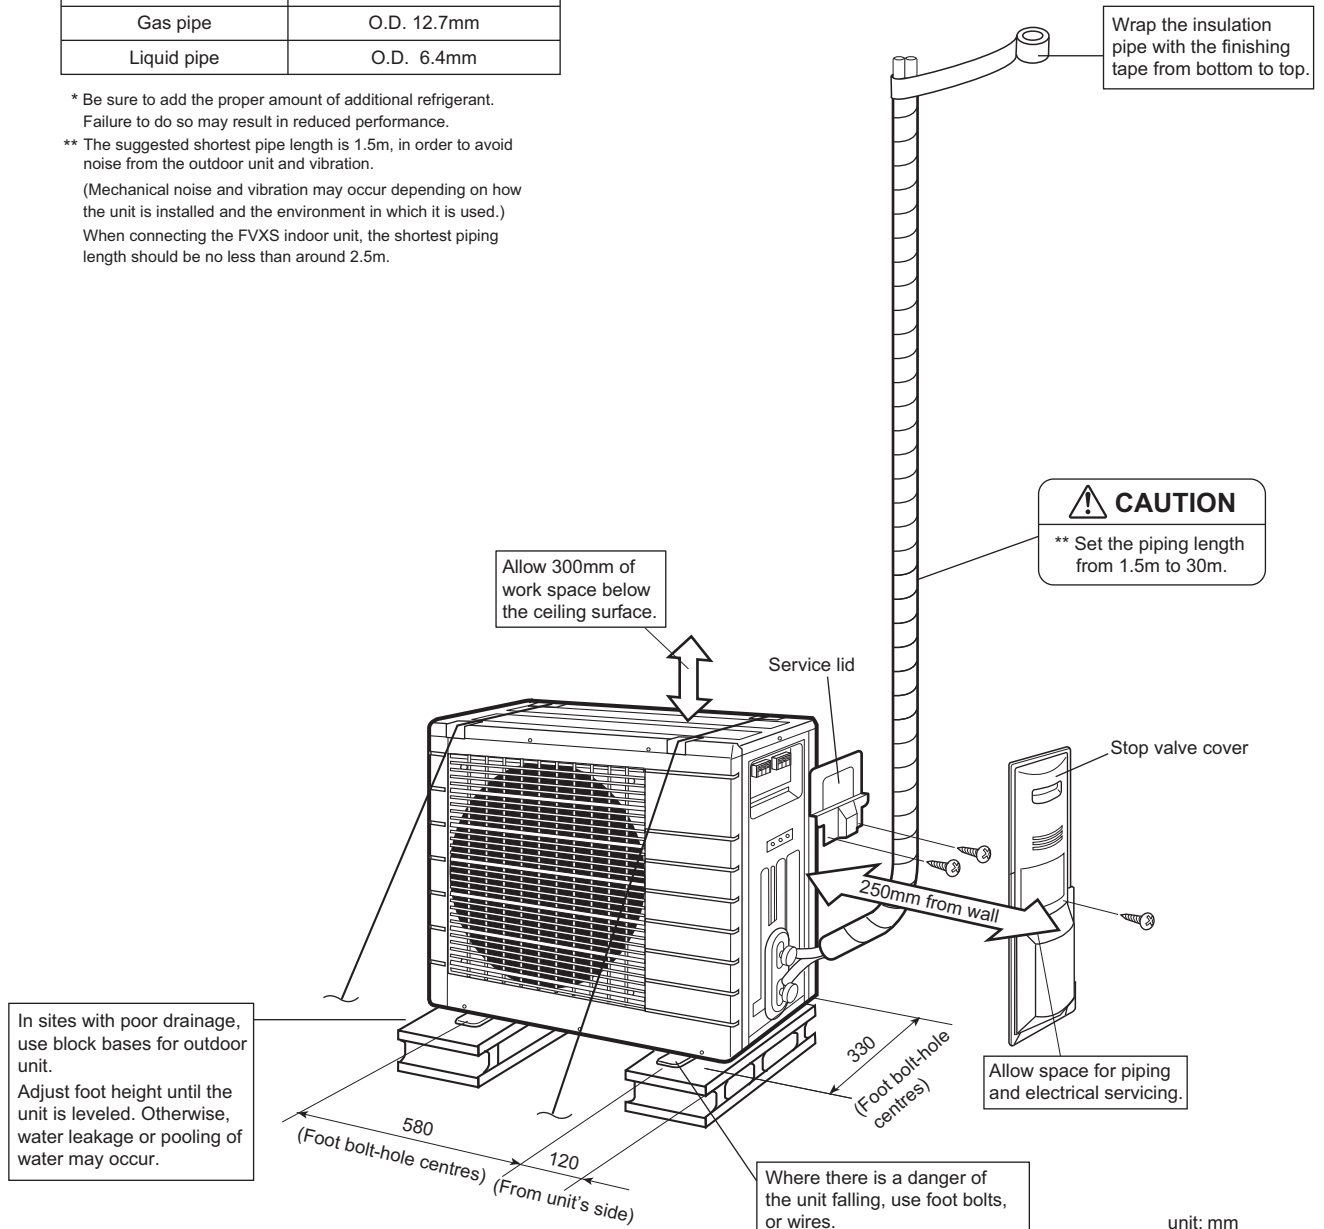

Installation Guidelines


- Where a wall or other obstacle is in the path of outdoor unit's inlet or outlet airflow, follow the installation guidelines below.
- For any of the following installation patterns, the wall height on the outlet side should be 1200mm or less.

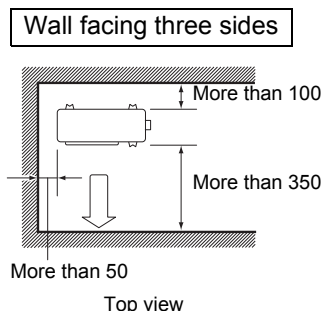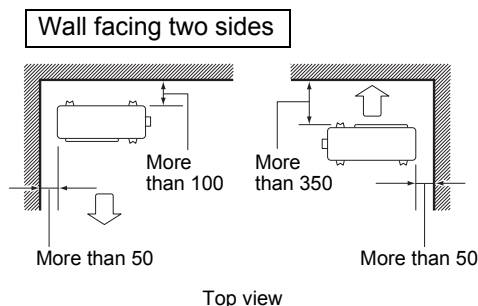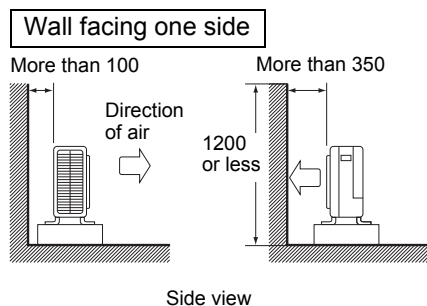

unit: mm

Precautions on Installation

 - Check the strength and level of the installation ground so that the unit will not cause any operating vibration or noise after installed.
- In accordance with the foundation drawing, fix the unit securely by means of the foundation bolts. (Prepare 4 sets of M8 or M10 foundation bolts, nuts and washers each which are available on the market.)
- It is best to screw in the foundation bolts until their ends are 20mm from the foundation surface.




Outdoor Unit Installation

1. Installing outdoor unit

- 1) When installing the outdoor unit, refer to "Precautions for Selecting the Location" and the "Outdoor Unit Installation Drawings."
- 2) If drain work is necessary, follow the procedures below.

2. Drain work


- 1) Use drain plug for drainage.
- 2) If the drain port is covered by a mounting base or floor surface, place additional foot bases of at least 30mm in height under the outdoor unit's feet.
- 3) In cold areas, do not use a drain hose with the outdoor unit.
(Otherwise, drain water may freeze, impairing heating performance.)

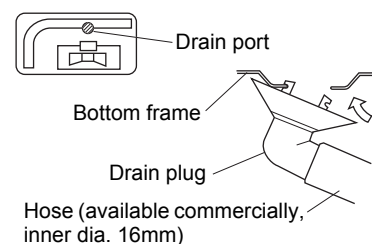

Outdoor Unit Installation

3. Flaring the pipe end

- 1) Cut the pipe end with a pipe cutter.
- 2) Remove burrs with the cut surface facing downward so that the chips do not enter the pipe.
- 3) Put the flare nut on the pipe.
- 4) Flare the pipe.
- 5) Check that the flaring is properly made.

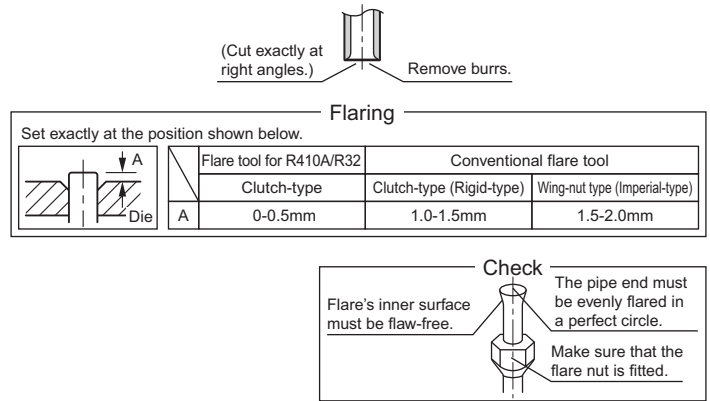

WARNING

- Do not use mineral oil on flared part.
- Prevent mineral oil from getting into the system as this would reduce the lifetime of the units.
- Never use piping which has been used for previous installations. Only use parts which are delivered with the unit.
- Never install a drier to this R32 unit in order to guarantee its lifetime.
- The drying material may dissolve and damage the system.
- Incomplete flaring may cause refrigerant gas leakage.


4. Refrigerant piping



CAUTION

- Use the flare nut fixed to the main unit. (To prevent cracking of the flare nut by aged deterioration.)
- To prevent gas leakage, apply refrigeration oil only to the inner surface of the flare. (Use refrigeration oil for R410A or R32.)
- Use torque wrenches when tightening the flare nuts to prevent damage to the flare nuts and gas leakage.

Align the centres of both flares and tighten the flare nuts 3 or 4 turns by hand. Then tighten them fully with the torque wrenches.

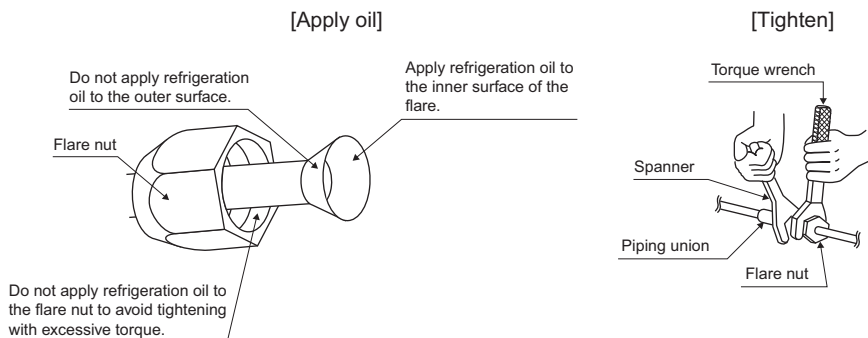

Flare nut tightening torque	
Gas side	Liquid side
1/2 inch	1/4 inch
49.5-60.3N • m (505-615kgf • cm)	14.2-17.2N • m (144-175kgf • cm)

Valve cap tightening torque	
Gas side	Liquid side
1/2 inch	1/4 inch
48.1-59.7N • m (490-610kgf • cm)	21.6-27.4N • m (220-280kgf • cm)

Service port cap tightening torque	
10.8-14.7N • m (110-150kgf • cm)	


Outdoor Unit Installation

5. Purging air and checking gas leakage

- When piping work is completed, it is necessary to purge the air and check for gas leakage.

WARNING

- Do not mix any substance other than the specified refrigerant (R32) into the refrigeration cycle.
 - When refrigerant gas leaks occur, ventilate the room as soon and as much as possible.
 - R32, as well as other refrigerants, should always be recovered and never be released directly into the environment.
 - Use a vacuum pump for R32 or R410A exclusively. Using the same vacuum pump for different refrigerants may damage the vacuum pump or the unit.
 - Use tools for R32 or R410A (such as the gauge manifold, charging hose, or vacuum pump adapter.)
-
- If using additional refrigerant, perform air purging from the refrigerant pipes and indoor unit using a vacuum pump, then charge additional refrigerant.
 - Use a hexagonal wrench (4mm) to operate the stop valve rod.
 - All refrigerant pipe joints should be tightened with a torque wrench at the specified tightening torque.

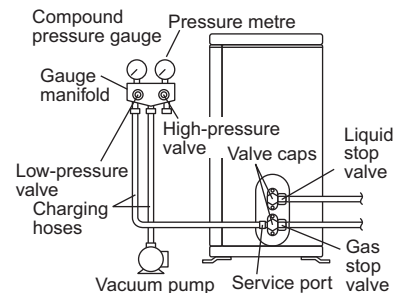

- Connect projection side of charging hose (which comes from gauge manifold) to gas stop valve's service port.
- Fully open gauge manifold's low-pressure valve (Lo) and completely close its high-pressure valve (Hi). (High-pressure valve subsequently requires no operation.)
- Do vacuum pumping and make sure that the compound pressure gauge reads -0.1MPa (-76cmHg).^{*1}
- Close gauge manifold's low-pressure valve (Lo) and stop vacuum pump. (Keep this state for a few minutes to make sure that the compound pressure gauge pointer does not swing back.)^{*2}
- Remove caps from liquid stop valve and gas stop valve.
- Turn the liquid stop valve's rod 90 degrees counterclockwise with a hexagonal wrench to open valve. Close it after 5 seconds, and check for gas leakage. Using soapy water, check for gas leakage from indoor unit's flare and outdoor unit's flare and valve rods. After the check is complete, wipe all soapy water off.
- Disconnect charging hose from gas stop valve's service port, then fully open liquid and gas stop valves. (Do not attempt to turn valve rod beyond its stop.)
- Tighten valve caps and service port caps for the liquid and gas stop valves with a torque wrench at the specified torques.

^{*1}. Pipe length vs. vacuum pump run time.

Pipe length	Up to 15m	More than 15m
Run time	Not less than 10 min.	Not less than 15 min.

^{*2}. If the compound pressure gauge pointer swings back, refrigerant may have water content or a loose pipe joint may exist. Check all pipe joints and retighten nuts as needed, then repeat steps 2) through 4).

Outdoor Unit Installation

6. Refilling the refrigerant

Check the type of refrigerant to be used on the machine nameplate.

Fill from the gas pipe in liquid form.

Important information regarding the refrigerant used

This product contains fluorinated greenhouse gases covered by the Kyoto Protocol. Do not vent gases into the atmosphere.

Refrigerant type: **R32**

GWP⁽¹⁾ value: **675** ⁽¹⁾GWP = global warming potential

Please fill in with indelible ink,

- ① the factory refrigerant charge of the product,
 - ② the additional refrigerant amount charged in the field and
 - ①+② the total refrigerant charge
- on the refrigerant charge label supplied with the product.

The filled out label must be adhered in the proximity of the product charging port (e.g. onto the inside of the stop valve cover).

Contains fluorinated greenhouse gases covered by the Kyoto Protocol

R32

① = kg

② = kg

①+② = kg

- 1 factory refrigerant charge of the product: see unit name plate
- 2 additional refrigerant amount charged in the field
- 3 total refrigerant charge
- 4 Contains fluorinated greenhouse gases covered by the Kyoto Protocol
- 5 outdoor unit
- 6 refrigerant cylinder and manifold for charging

NOTE

National implementation of EU regulation on certain fluorinated greenhouse gases may require to provide the appropriate official national language on the unit. Therefore an additional multilingual fluorinated greenhouse gases label is supplied with the unit. Sticking instructions are illustrated on the backside of that label.

7. Refrigerant piping work

7-1 Cautions on pipe handling

- 1) Protect the open end of the pipe against dust and moisture.
- 2) All pipe bends should be as gentle as possible. Use a pipe bender for bending.



7-2 Selection of copper and heat insulation materials

When using commercial copper pipes and fittings, observe the following:

- 1) Insulation material: Polyethylene foam
Heat transfer rate: 0.041 to 0.052W/mK (0.035 to 0.045kcal/(mh •°C))
Refrigerant gas pipe's surface temperature reaches 110°C max.
Choose heat insulation materials that will withstand this temperature.
- 2) Be sure to insulate both the gas and liquid piping and to provide insulation dimensions as below.

Gas side	Liquid side	Gas pipe thermal insulation	Liquid pipe thermal insulation
O.D. 12.7mm	O.D. 6.4mm	I.D. 14-16mm	I.D. 8-10mm
Minimum bend radius		Thickness 10mm Min.	
40mm or more	30mm or more		
Thickness 0.8mm (C1220T-O)			


- 3) Use separate thermal insulation for gas and liquid refrigerant pipes.

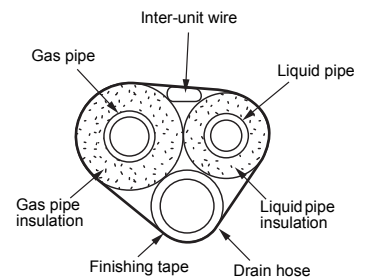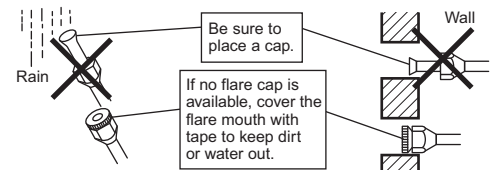

Pump Down Operation

In order to protect the environment, be sure to pump down when relocating or disposing of the unit.

- 1) Remove the valve cap from liquid stop valve and gas stop valve.
- 2) Carry out forced cooling operation.
- 3) After 3 to 4 minutes, close the liquid stop valve with a hexagonal wrench.
- 4) After 5 to 6 minutes, close the gas stop valve and stop forced cooling operation.

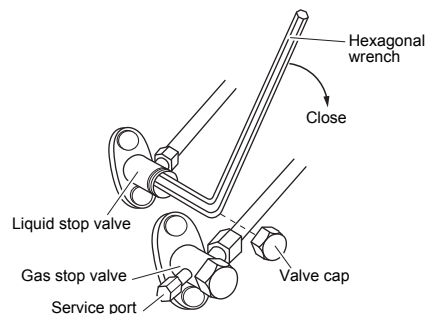

Forced cooling operation

■ Using the indoor unit ON/OFF switch

Press the indoor unit ON/OFF switch for at least 5 seconds. (The operation will start.)

- Forced cooling operation will stop automatically after around 15 minutes.

To stop the operation, press the indoor unit ON/OFF switch.

■ Using the indoor unit's remote controller

- 1) Press "MODE" button and select the cooling mode.
 - 2) Press "ON/OFF" button to turn on the system.
 - 3) Press both the "TEMP" button and "MODE" button at the same time.
 - 4) Press "MODE" button twice. ($\overline{7}$ will be displayed and the unit will enter forced cooling operation.)
 - Forced cooling operation will stop automatically after around 30 minutes.
- To stop the operation, press "ON/OFF" button.



CAUTION


- When pressing the switch, do not touch the terminal block. It has a high voltage, and touching it could cause electric shock.
- After closing the liquid stop valve, close the gas stop valve within 3 minutes, then stop the forced operation.

Facility Setting (cooling at low outdoor temperature)

This function is designed for facilities such as equipment or computer rooms. It is never to be used in a residence or office where people occupy the space.

- **Cutting jumper 6 (J6)** on the circuit board will expand the operation range down to -15°C . However it will stop if the outdoor temperature drops below -18°C and start back up once the temperature rises again.

- 1) Remove the 3 screws on the side and remove the top plate of the outdoor unit.
- 2) Remove the drip proof cover.
- 3) Cut the jumper (J6) of the PCB inside.

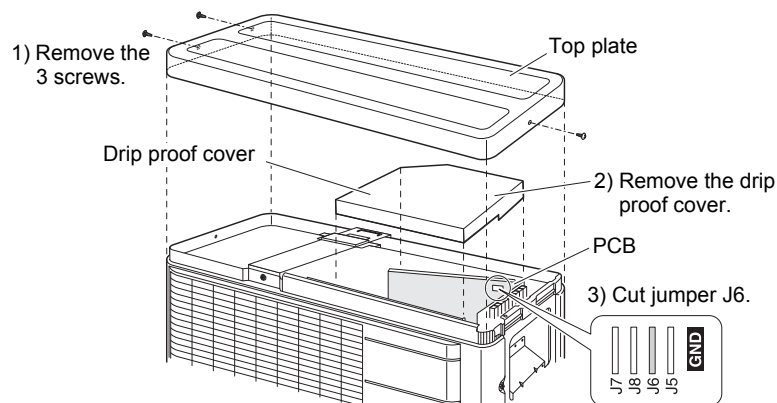

CAUTION

- If the outdoor unit is installed where the heat exchanger of the unit is exposed to direct wind, provide a windbreak wall.
- Intermittent noises may be produced by the indoor unit due to the outdoor fan turning on and off when using facility settings.
- Do not place humidifiers or other items which might raise the humidity in rooms where facility settings are being used. A humidifier might cause dew condensation from the indoor unit outlet vent.
- Cutting jumper 6 (J6) sets the indoor fan tap to the highest position. Notify the user about this.


Wiring

WARNING

- Do not use tapped wires, stranded wires, extension cords, or starburst connections, as they may cause overheating, electrical shock, or fire.
- Do not use locally purchased electrical parts inside the product. (Do not branch the power for the drain pump, etc., from the terminal block.) Doing so may cause electric shock or fire.
- Be sure to install an earth leak detector. (One that can handle higher harmonics.)
(This unit uses an inverter, which means that it must be used an earth leak detector capable handling harmonics in order to prevent malfunctioning of the earth leak detector itself.)
- Use an all-pole disconnection type breaker with at least 3mm between the contact point gaps.
- Do not connect the power wire to the indoor unit. Doing so may cause electric shock or fire.


- Equipment complying with EN/IEC 61000-3-12⁽¹⁾
- Do not turn ON the safety breaker until all work is completed.

- 1) Strip the insulation from the wire (20mm).
- 2) Connect the inter-unit wire between the indoor and outdoor units **so that the terminal numbers match**. Tighten the terminal screws securely. We recommend a flathead screwdriver be used to tighten the screws.

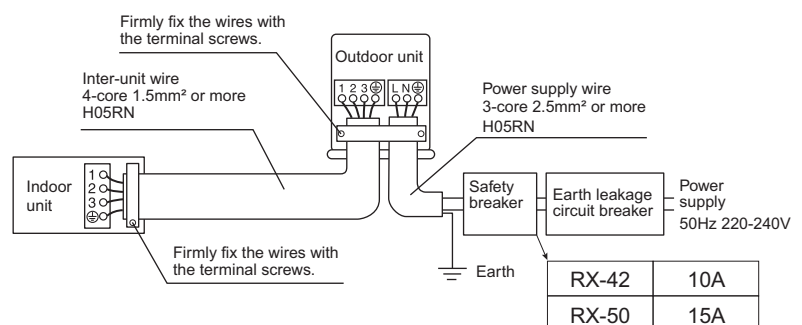

⁽¹⁾ European/International Technical Standard setting the limits for harmonic currents produced by equipment connected to public low-voltage systems with input current $>16\text{ A}$ and $\leq 75\text{ A}$ per phase.



Wiring

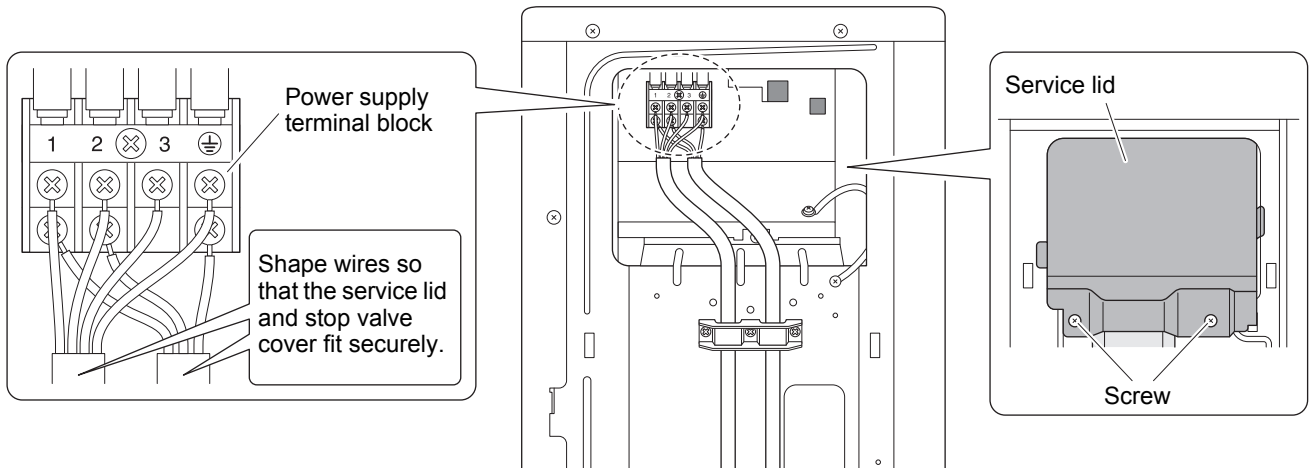

Observe the notes mentioned below when wiring to the power supply terminal block.
Precautions to be taken for power supply wiring.


⚠ CAUTION

- When connecting the wires to the terminal block using a single core wire, be sure to perform curling. Problems with the work may cause heat and fires.

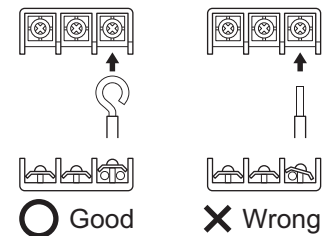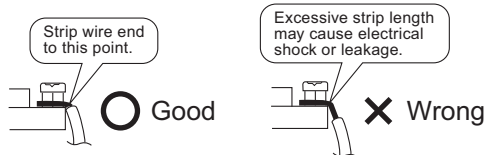

Stripping wire at terminal block


- If the stranded wires must be used, make sure to use the round crimp-style terminal for connection to the power supply terminal block. Place the round crimp-style terminals on the wires up to the covered part and secure in place.

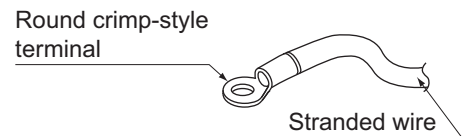

- 3) Pull the wire and make sure that it does not disconnect. Then fix the wire in place with a wire stop.

Wiring

 Wiring diagram

For applied parts and numbering refer to the wiring diagram sticker supplied on the unit. Part numbering is realized by Arabic numbers in ascending order for each part and is represented in the overview below by symbol ^{***} in the part code.					
	:	CONNECTION		:	PROTECTIVE EARTH (SCREW)
	:	CONNECTOR		:	RECTIFIER
	:	EARTH		:	RELAY CONNECTOR
	:	FIELD WIRING		:	SHORT CIRCUIT CONNECTOR
	:	INDOOR UNIT		:	TERMINAL
	:	OUTDOOR UNIT		:	TERMINAL STRIP
	:	PROTECTIVE EARTH		:	WIRE CLAMP
BLK	:	BLACK	GRN	:	GREEN
BLU	:	BLUE	GRY	:	GREY
BRN	:	BROWN	ORG	:	ORANGE
PNK	:	PINK	PRP, PPL	:	PURPLE
RED	:	RED	WHT	:	WHITE
			YLW	:	YELLOW
A*P	:	PRINTED CIRCUIT BOARD	PTC*	:	THERMISTOR PTC
BS*	:	PUSH BUTTON ON / OFF, OPERATION SWITCH	Q*	:	INSULATED GATE BIPOLAR TRANSISTOR (IGBT)
BZ, H*O	:	BUZZER	Q*DI	:	EARTH LEAK CIRCUIT BREAKER
C*	:	CAPACITOR	Q*L	:	OVERLOAD PROTECTOR
CN*, E*AC*, HA*, HE, HL*, HN*, HR*, MR*_A, MR*_B, S*, X*A	:	CONNECTION, CONNECTOR	Q*M	:	THERMO SWITCH
D*, V*D	:	DIODE	R*	:	RESISTOR
DB*	:	DIODE BRIDGE	R*T	:	THERMISTOR
DS*	:	DIP SWITCH	RC	:	RECEIVER
E*H	:	HEATER	S*C	:	LIMIT SWITCH
F*U, FU* (FOR CHARACTERISTICS REFER TO PCB INSIDE YOUR UNIT)	:	FUSE	S*L	:	FLOAT SWITCH
FG*	:	CONNECTOR (FRAME GROUND)	S*NPH	:	PRESSURE SENSOR (HIGH)
H*	:	HARNESS	S*NPL	:	PRESSURE SENSOR (LOW)
H*P, LED*, V*L	:	PILOT LAMP, LIGHT EMITTING DIODE	S*PH, HPS*	:	PRESSURE SWITCH (HIGH)
HAP	:	LIGHT EMITTING DIODE (SERVICE MONITOR GREEN)	S*PL	:	PRESSURE SWITCH (LOW)
IES	:	INTELLIGENT EYE SENSOR	S*T	:	THERMOSTAT
IPM*	:	INTELLIGENT POWER MODULE	S*W, SW*	:	OPERATION SWITCH
K*R, KCR, KFR, KHuR	:	MAGNETIC RELAY	SA*	:	SURGE ARRESTOR
L	:	LIVE	SR*, WLU	:	SIGNAL RECEIVER
L*	:	COIL	SS*	:	SELECTOR SWITCH
L*R	:	REACTOR	SHEET METAL	:	TERMINAL STRIP FIXED PLATE
M*	:	STEPPER MOTOR	T*R	:	TRANSFORMER
M*C	:	COMPRESSOR MOTOR	TC, TRC	:	TRANSMITTER
M*F	:	FAN MOTOR	V*, R*V	:	VARISTOR
M*P	:	DRAIN PUMP MOTOR	V*R	:	DIODE BRIDGE
M*S	:	SWING MOTOR	WRC	:	WIRELESS REMOTE CONTROLLER
MR*, MRCW*, MRM*, MRN*	:	MAGNETIC RELAY	X*	:	TERMINAL
N	:	NEUTRAL	X*M	:	TERMINAL STRIP (BLOCK)
PAM	:	PULSE-AMPLITUDE MODULATION	Y*E	:	ELECTRONIC EXPANSION VALVE COIL
PCB*	:	PRINTED CIRCUIT BOARD	Y*R, Y*S	:	REVERSING SOLENOID VALVE COIL
PM*	:	POWER MODULE	Z*C	:	FERRITE CORE
PS	:	SWITCHING POWER SUPPLY	ZF, Z*F	:	NOISE FILTER

Trial Operation and Testing

1. Trial operation and testing

1-1 Measure the supply voltage and make sure that it falls in the specified range.

1-2 Trial operation should be carried out in either cooling or heating mode.

■ For heat pump

- In cooling mode, select the lowest programmable temperature; in heating mode, select the highest programmable temperature.

1) Trial operation may be disabled in either mode depending on the room temperature.

2) After trial operation is complete, set the temperature to a normal level (26°C to 28°C in cooling mode, 20°C to 24°C in heating mode).



3) For protection, the system disables restart operation for 3 minutes after it is turned off.



1-3 Carry out the test operation in accordance with the operation manual to ensure that all functions and parts, such as louver movement, are working properly.



- The air conditioner requires a small amount of power in its standby mode. If the system is not to be used for some time after installation, shut off the circuit breaker to eliminate unnecessary power consumption.
- If the circuit breaker trips to shut off the power to the air conditioner, the system will restore the original operation mode when the circuit breaker is opened again.

2. Test items

Test items	Symptom	Check
Indoor and outdoor units are installed properly on solid bases.	Fall, vibration, noise	
No refrigerant gas leaks.	Incomplete cooling/heating function	
Refrigerant gas and liquid pipes and indoor drain hose extension are thermally insulated.	Water leakage	
Draining line is properly installed.	Water leakage	
System is properly earthed.	Electrical leakage	
The specified wires are used for inter-unit wiring.	Inoperative or burn damage	
Indoor or outdoor unit's air inlet or air outlet has clear path of air. Stop valves are opened.	Incomplete cooling/heating function	
Indoor unit properly receives remote control commands.	Inoperative	

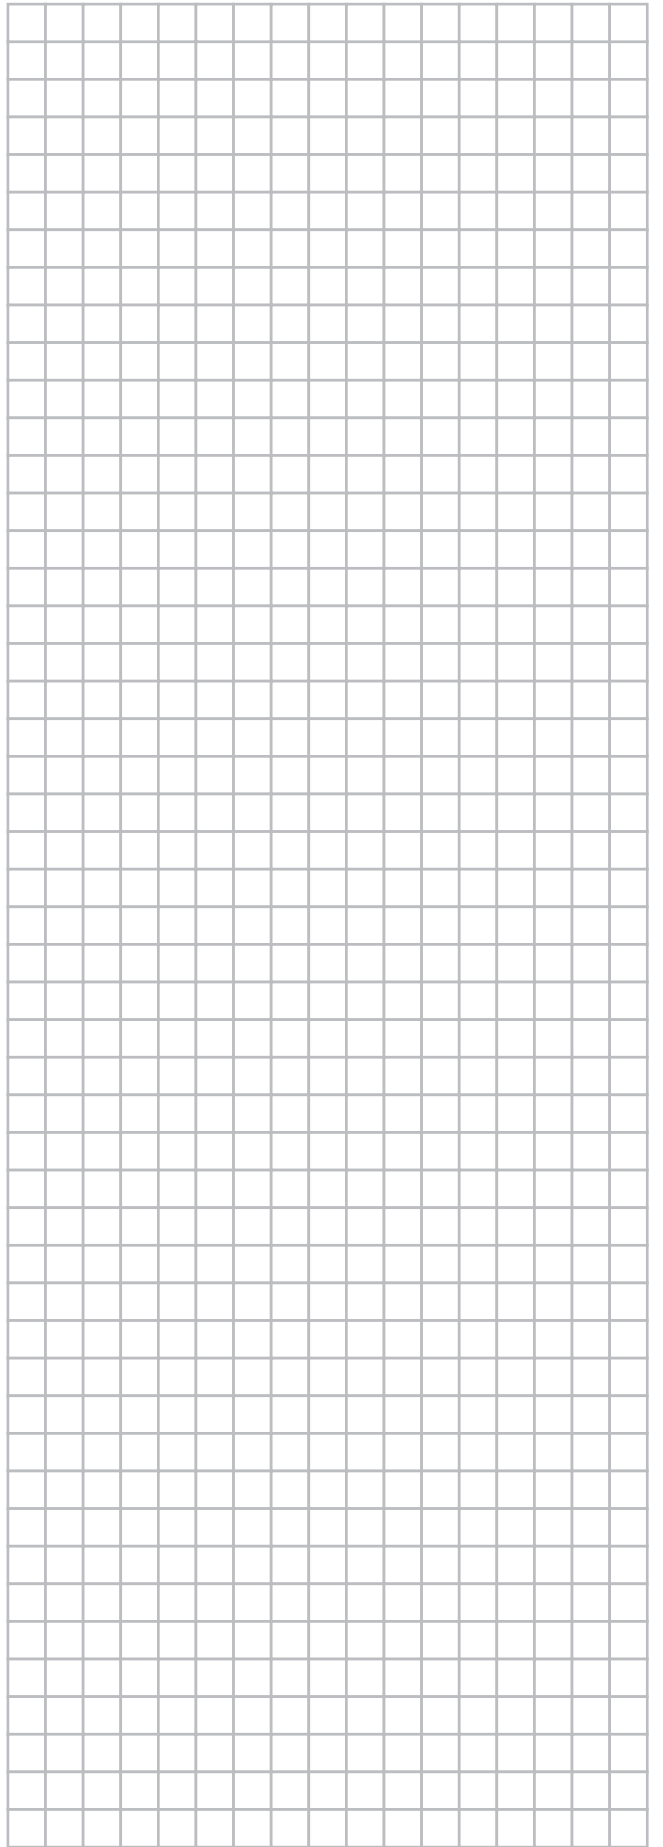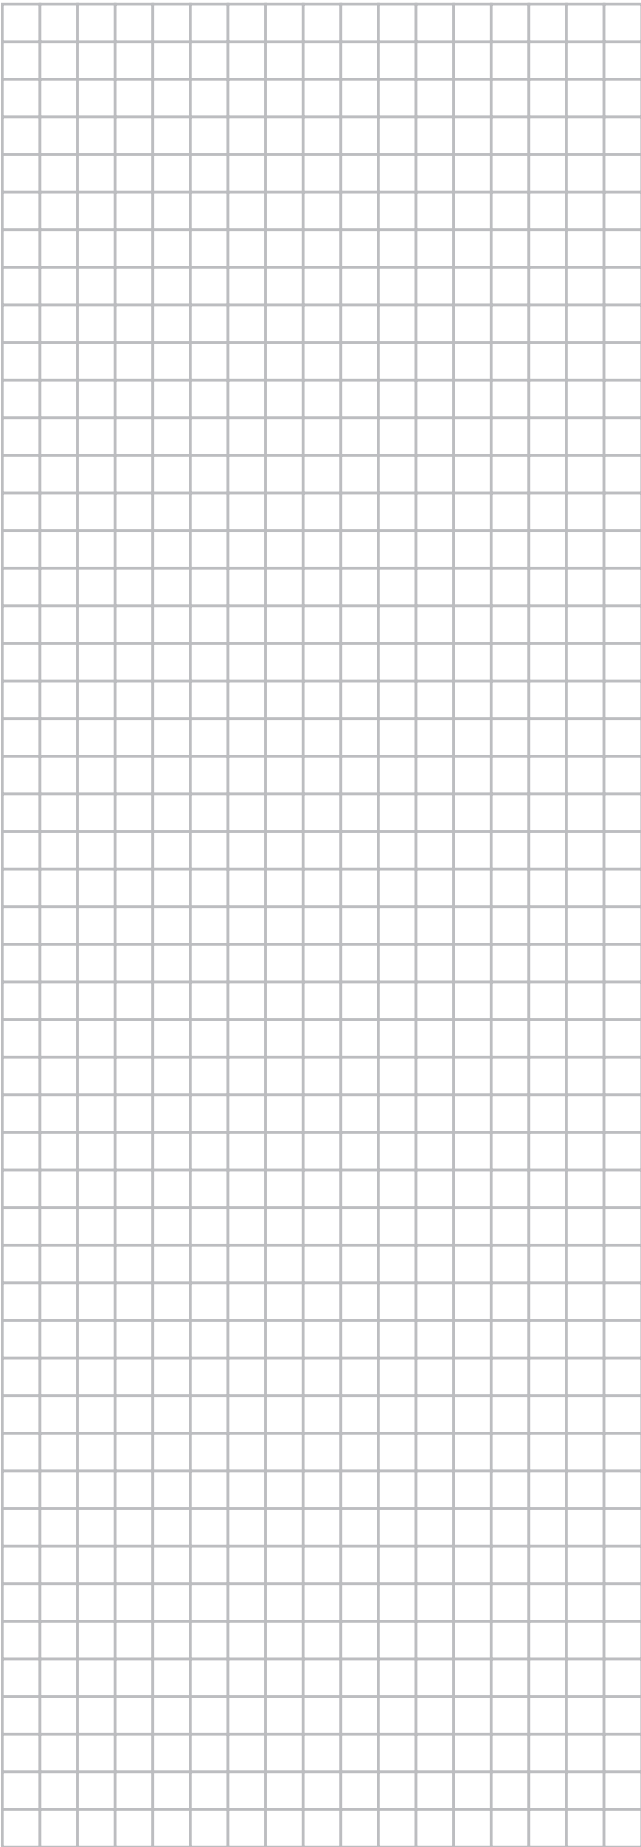

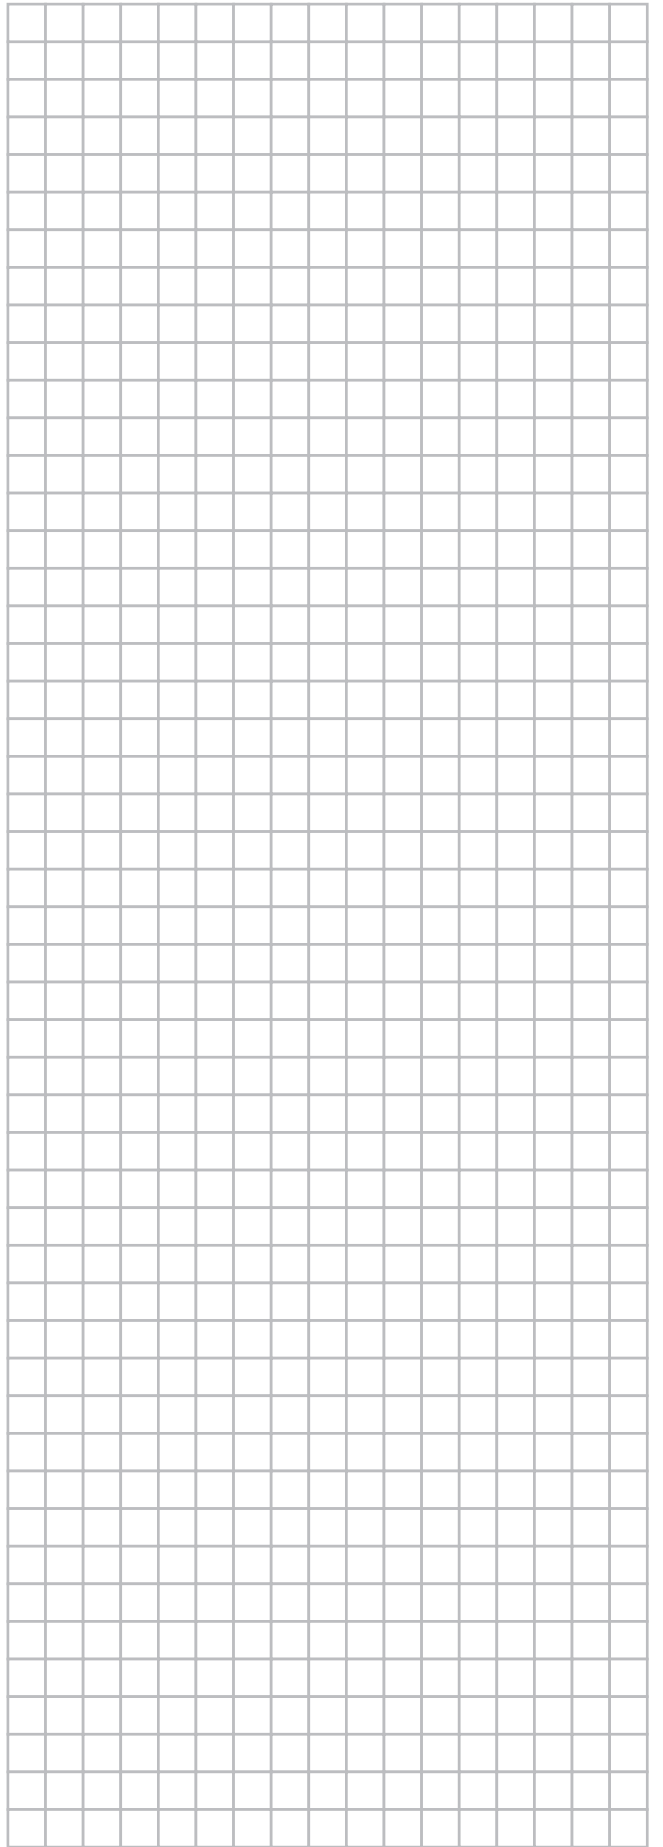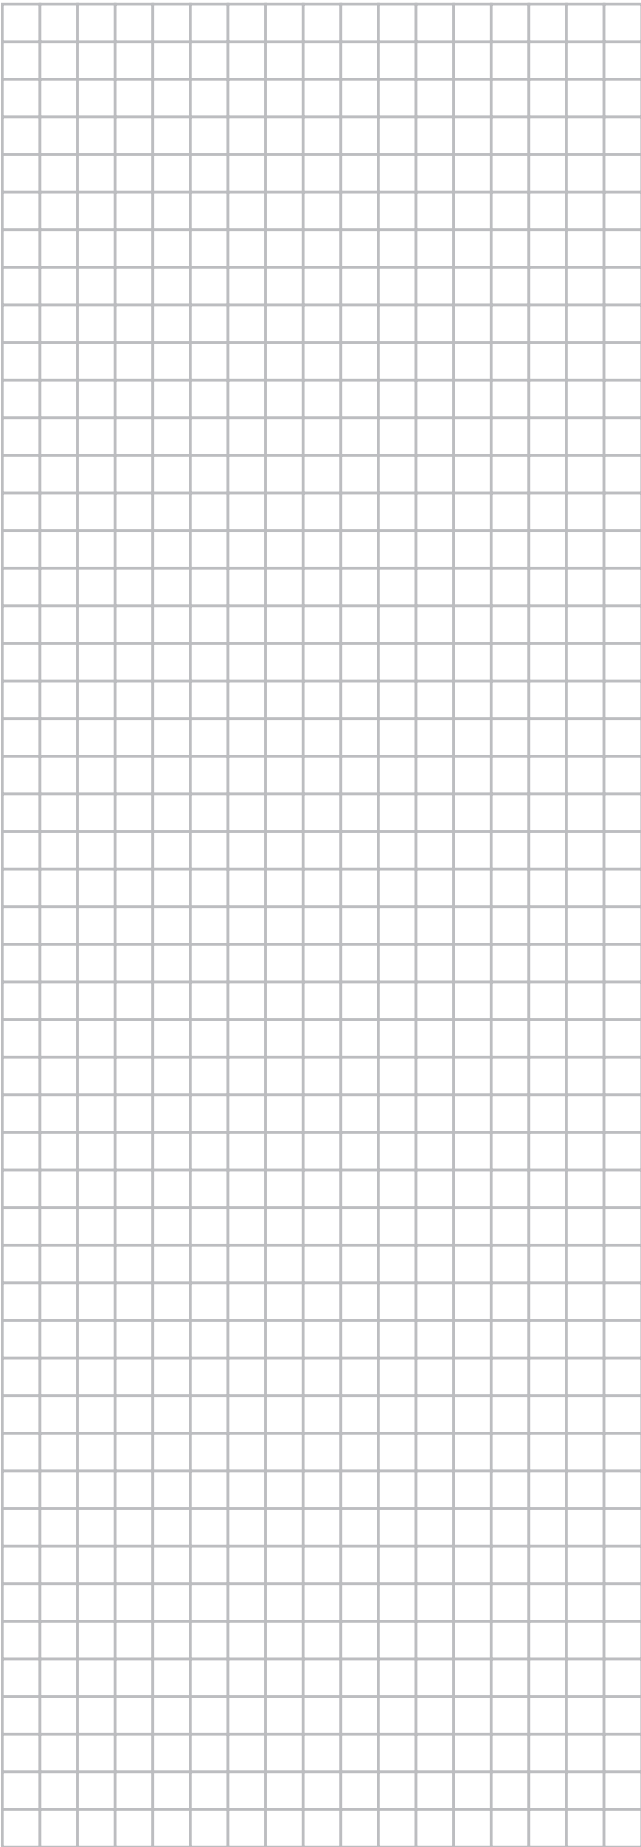

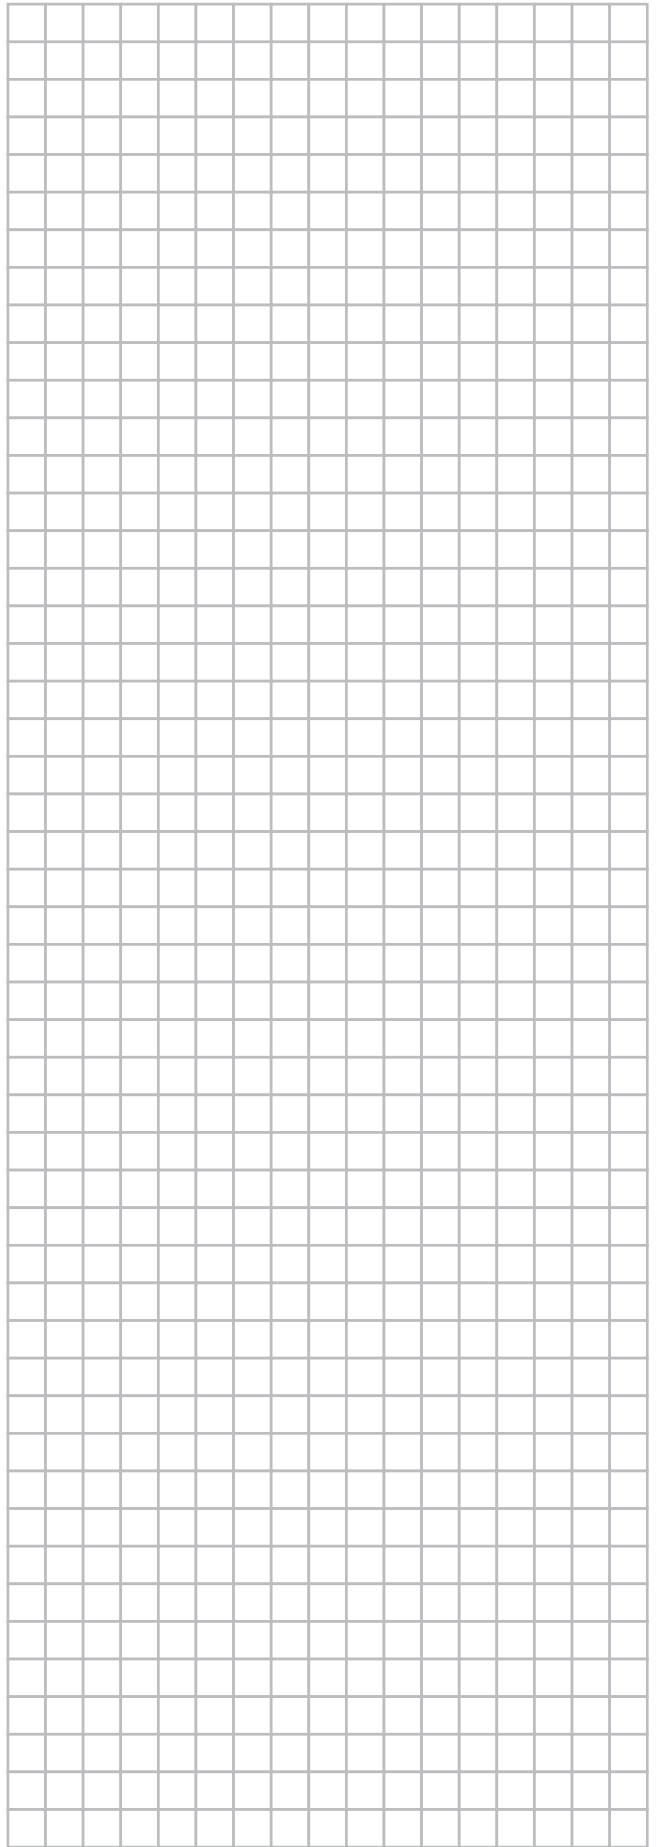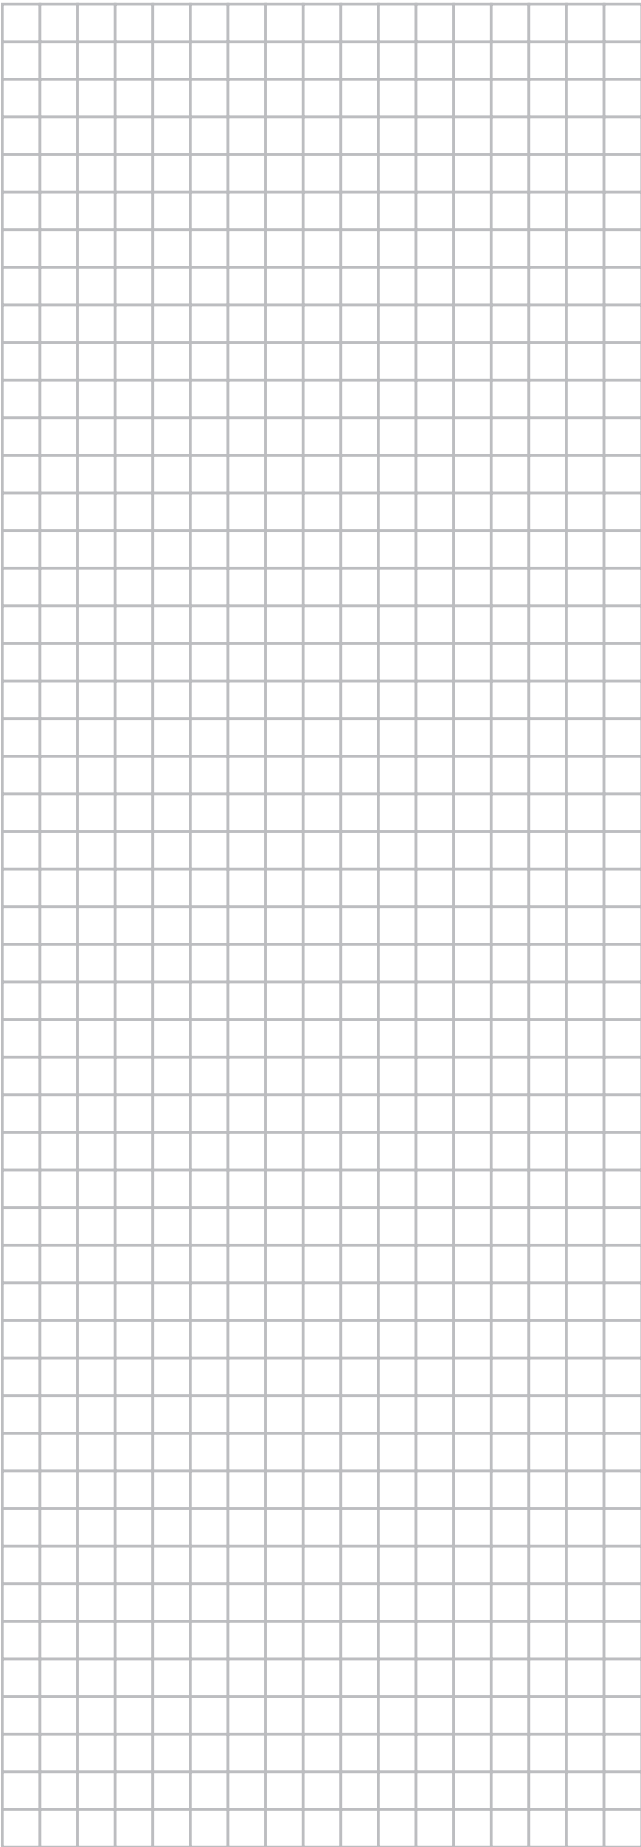

DAIKIN INDUSTRIES CZECH REPUBLIC s.r.o.

U Nové Hospody 1/1155, 301 00 Plzeň Skvrňany, Czech Republic

DAIKIN EUROPE N.V.

Zandvoordestraat 300, B-8400 Oostende, Belgium

Copyright 2014 Daikin



3P386698-1C 2015.07

Техника для климата

Доставляем оборудование по всей России от 3 дней транспортными компаниями. Реализуем проекты в десятках регионов — от Калининграда до Владивостока.

9600+

объектов и поставок

от 1 дня

отгрузки в транспортную компанию

Технические данные файла

Документ: Инструкция по монтажу Daikin FTXJ50MW — FTXM50M / RXM50M

Идентификатор библиотеки: LIB-002367

Исходный файл: daikin-ftxj50mw-ftxm50m-rxm50m-instruktsiya-montazh.pdf

SHA-256 оригинала: 65aa8e51d8bcb09df28705b2189fc38d95a5442ee0f7014bd78f0846cba07f44

Постоянная ссылка: <https://iclim.ru/library/daikin-ftxj50mw-ftxm50m-rxm50m-instruktsiya-montazh.pdf>

Копия сформирована: 02.10.2026 10:17 UTC