



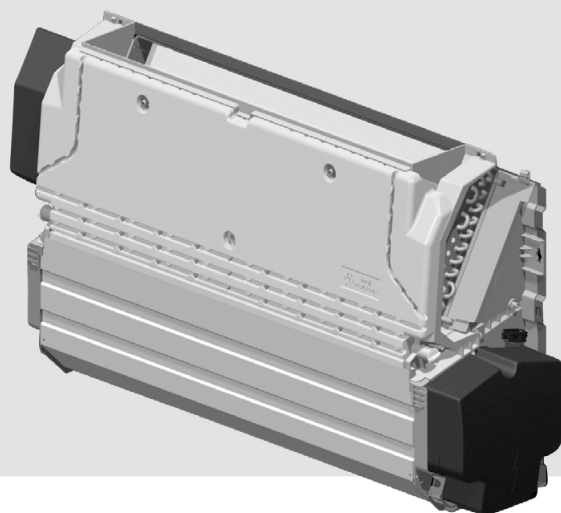

**INSTALLATION, OPERATION AND
MAINTENANCE INSTRUCTIONS**

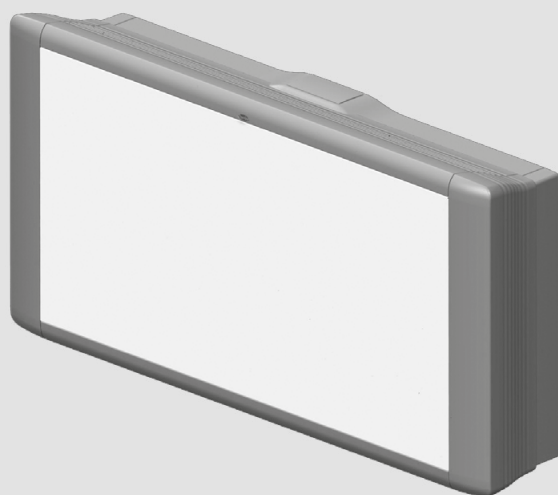

42NC/ND/NR/NI/NU

CONTENTS

1 - DELIVERY, CHECKS AND STORAGE9

2 - DESCRIPTION OF THE UNIT9

3 - HANDLING10

4 - MECHANICAL CONNECTION10

5 - AIR CONNECTIONS.....11

6 - HYDRAULIC CONNECTIONS.....12

7 - CONDENSATE DRAIN PAN.....13


8 - CONDENSATE DRAIN PUMP.....14

9 - ELECTRICAL CONNECTIONS15


10 - CARE AND MAINTENANCE17

11 - TESTS AND WARRANTY.....18


12 - CE CERTIFICATE OF CONFORMITY.....19

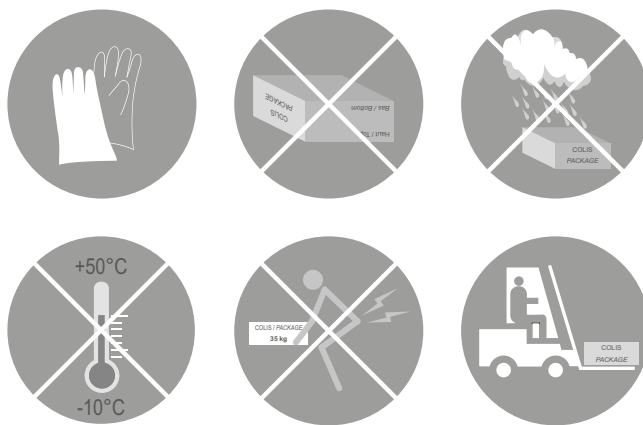

1

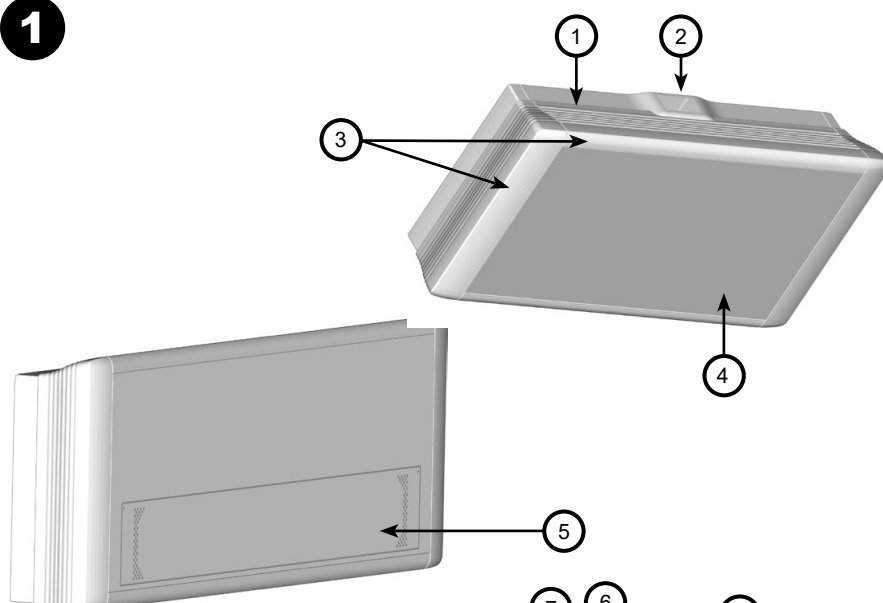




2

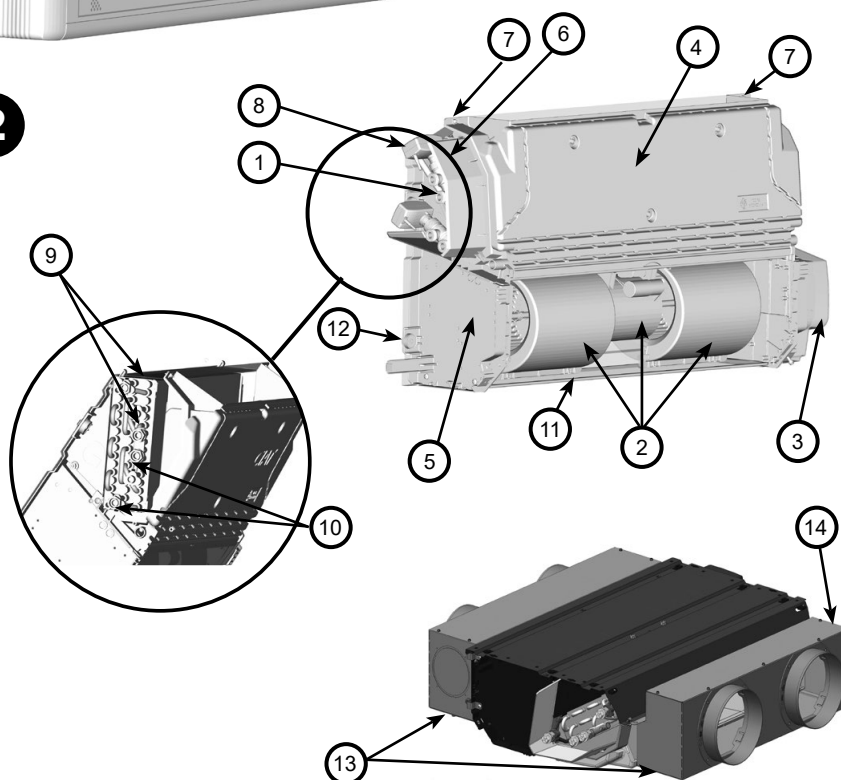


3

Ref.Produit/Item Ref.		Designation/Description	
7552742		42ND539FMGAA-CP	
An./Year	N. Serie/Serial Nbr	Composants/Components	
2019	02786871/0001		
Moteur/Motor (Ph/Hz/V)		Batterie/Hydro. coil	Fluide/Fluid
1+ N 50/60HZ 230/220V + T		2T	EAU
P. moteur/Motor P. (W)	118.9/142.7	Elec Element (Ph/Hz/V)	Maxi pressure (bar)
		1+ N 50/60HZ230/220V	1600000 PA (16BAR)
I. moteur/Motor I. (A)	0.89/1.07	Elec Elem. P.(W)/I.(A)	Cablage/Wiring
		3200	SANS
tr.mm - 1/4 in		Elec Diagram	N° Incorporation CE
		7547562	




1 **2** **3** **4** **5** **6** **7** **8** **9** **10** **11**

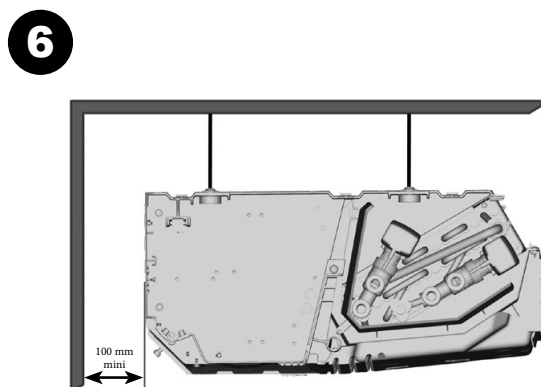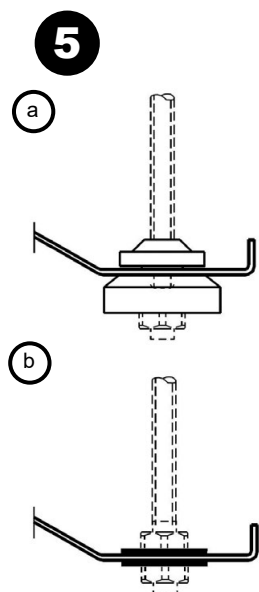
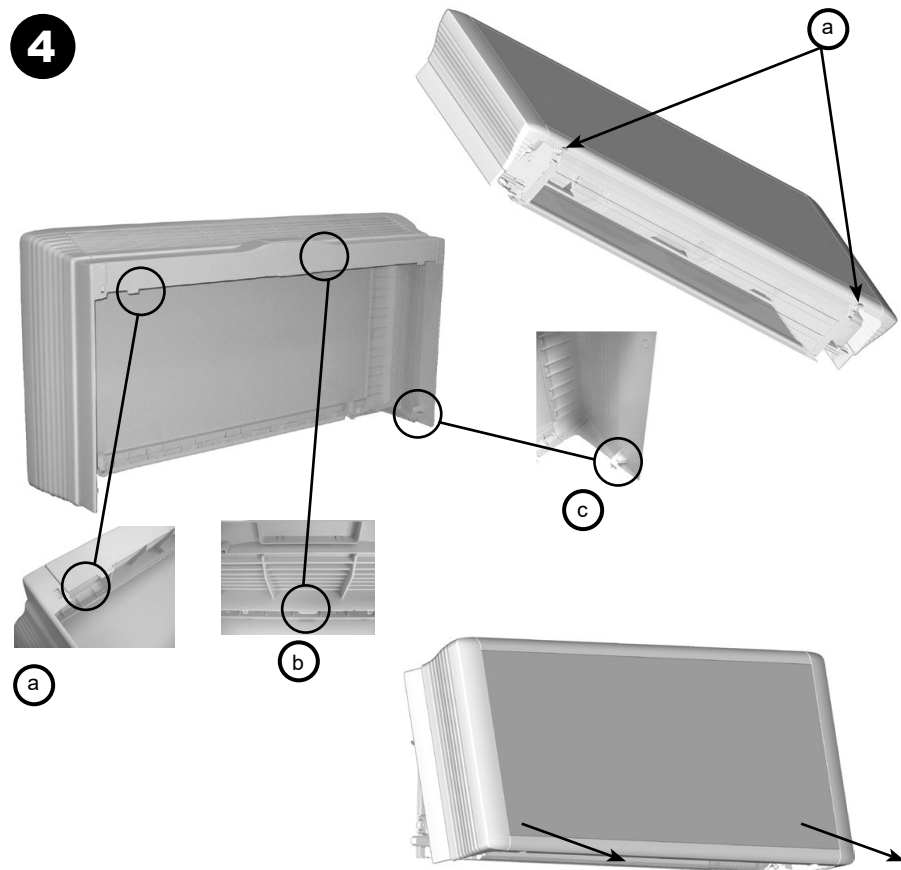


7

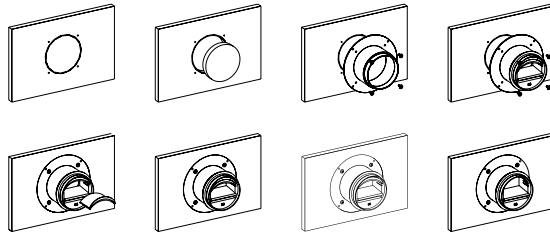


8

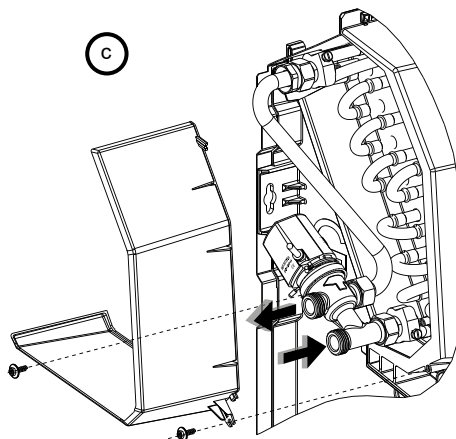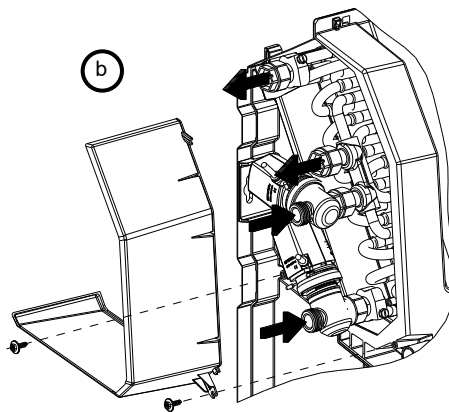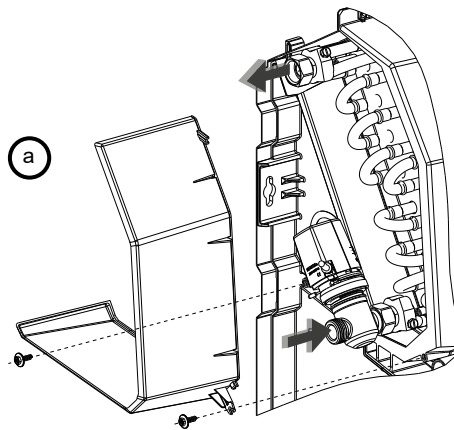


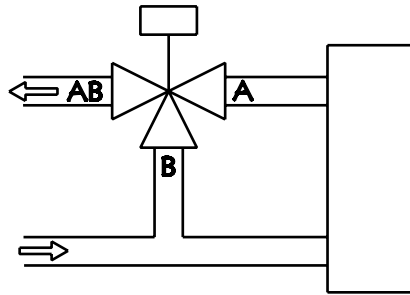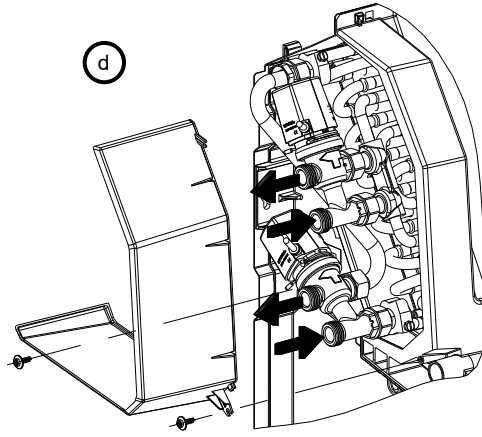


09

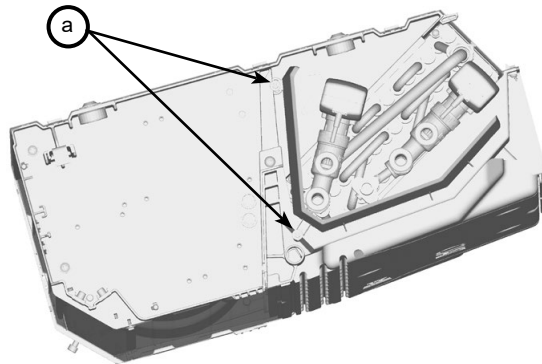


10

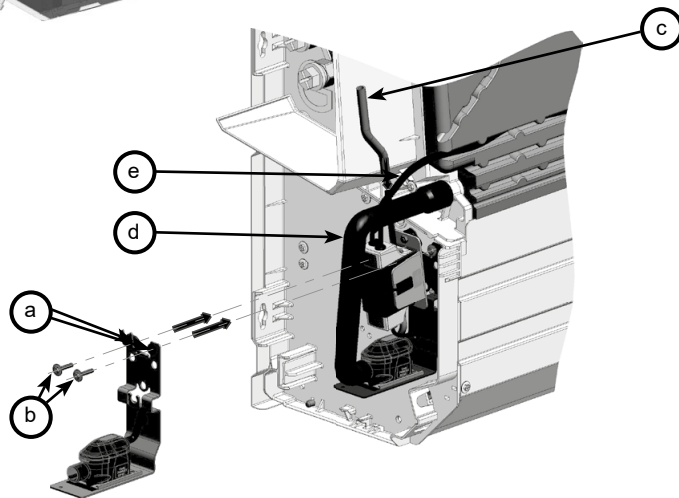


11

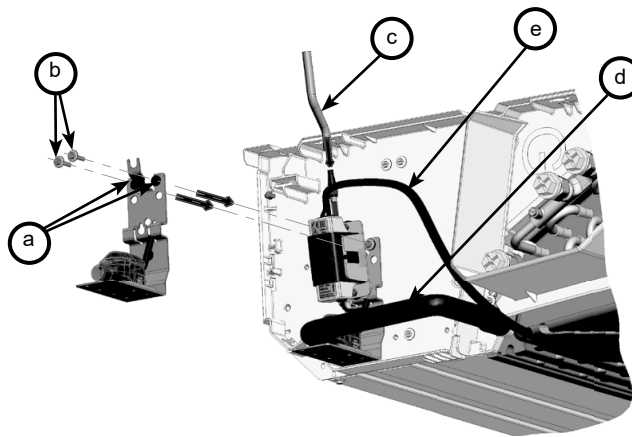


12

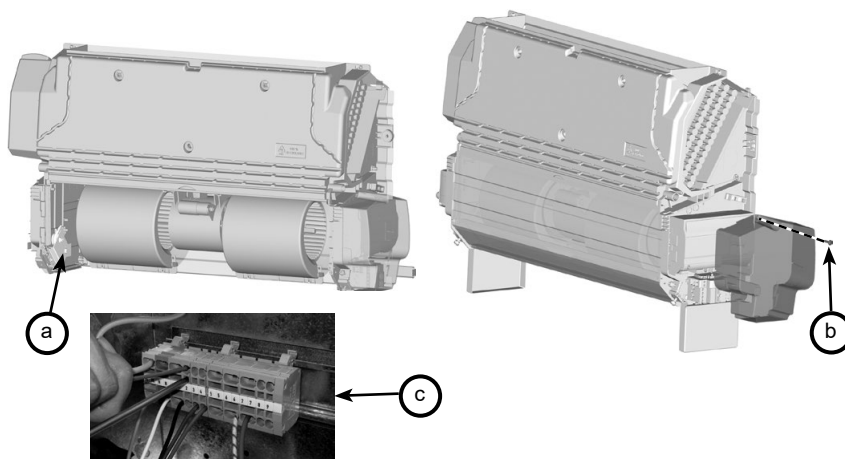


13

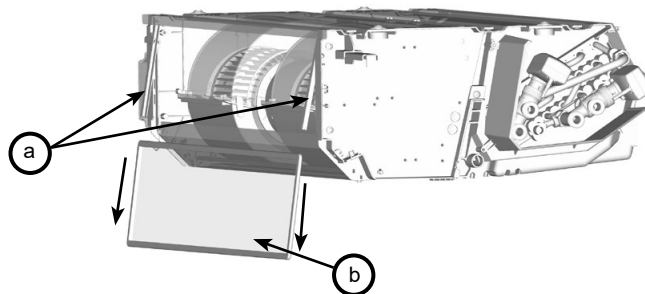


14

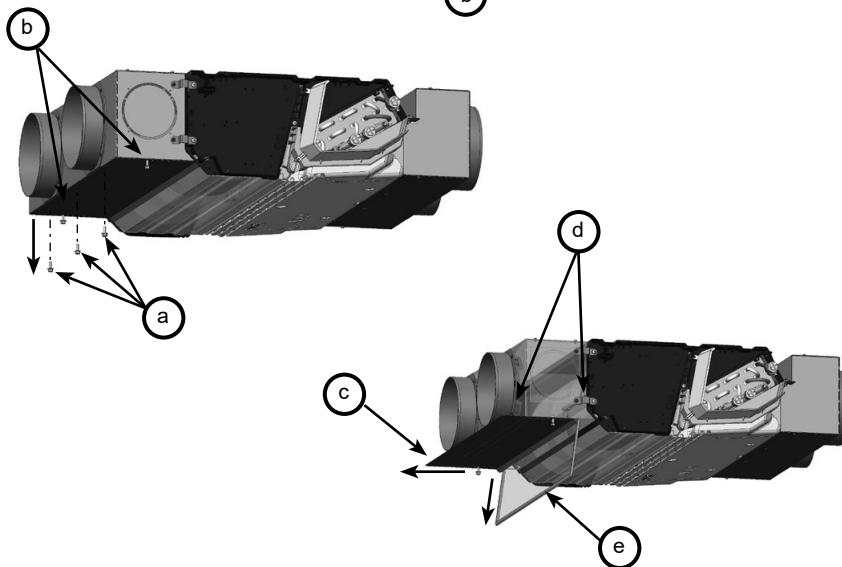




15

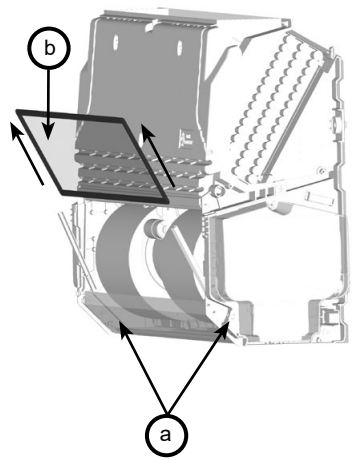


16

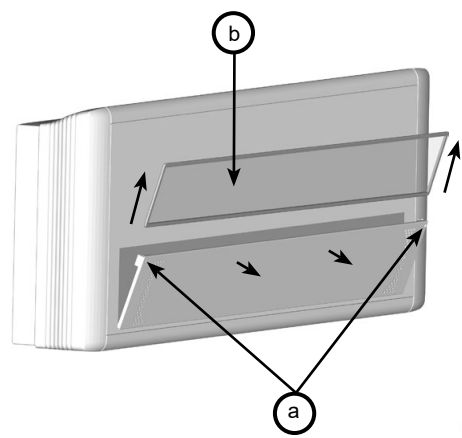

17

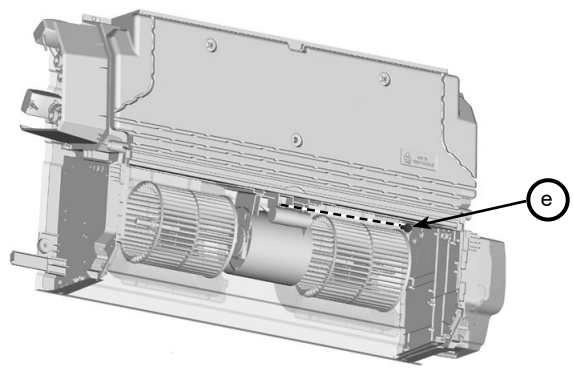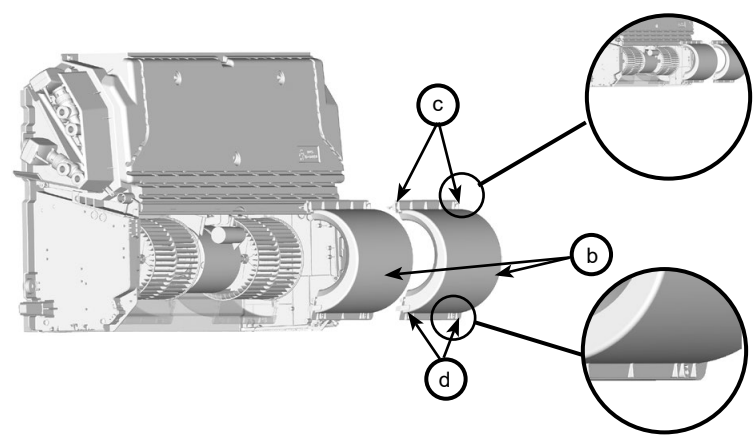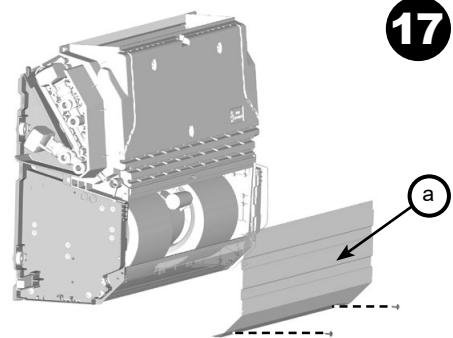

18

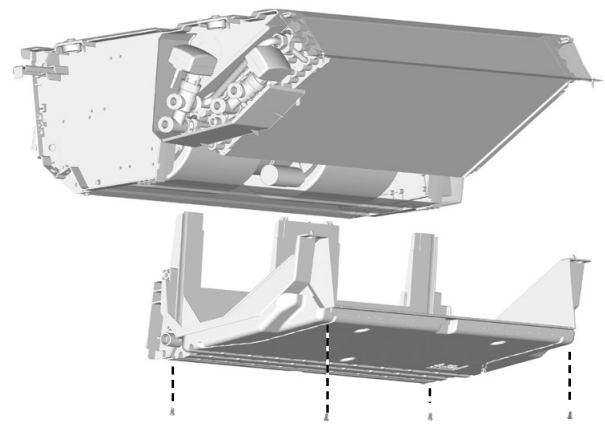

Carrier thanks you for purchasing a 42 fan coil unit. We trust that it will give you complete satisfaction. To ensure correct operation, all connections (electrical, utilities, etc.) must be made

in accordance with industry practice and the regulations in force in the country of use. Your Major Line must be maintained as recommended in this manual.

1 - DELIVERY, CHECKS AND STORAGE

The unit is delivered in packages that are labelled for easy identification.

Each unit bears a data plate. Include the reference number shown on the data plate in all correspondence.

It is the sole responsibility of the recipient to inspect the contents of the packages upon receipt.

- In the event of missing items, the customer must provide the exact number of parcels delivered
- All damaged or missing items must be reported on the delivery note in the presence of the driver before the delivery note is signed.

IMPORTANT : in accordance with Article 133 of the French Code of Commerce, these claims must be reported to the carrier by registered letter within three business days of receipt. The terms «conditional» and «pending unwrapping» shall have no value. The customer must unwrap the goods in the presence of the driver. Damage/shortages must be noted at time of delivery and described in detail.

2 - DESCRIPTION OF THE UNIT

The 42NC/ND unit you have just purchased is part of a range of multi-purpose comfort units. It is used for heating, cooling, dehumidification and air filtration. It has a coil with one or two cold or hot water supply circuits and can be equipped with an electric heater heating element and many options.

Cased model 42NC - 42NR (fig. 1)

- 1 - Discharge grille
- 2 - Central point of access to the control terminal (control optional)
- 3 - ABS end plates and side members
- 4 - Front panel in RAL 9010 pre-coated sheet metal
- 5 - Return grille in perforated sheet metal for the front air recovery version (42NR).

Uncased model 42ND - 42NI - 42NU (fig. 2)

- 1 - Heat exchange coil
- 2 - Fan motor assembly
- 3 - Access to motor terminal
- 4 - Main ABS PC single unit condensate pan with insulation reinforced by PSE panelling
- 5 - Condensate drain Ø 22mm
- 6 - Auxiliary drain pan
- 7 - Slots for attaching to the wall or ceiling
- 8 - Valve(s) (option or accessory)
- 9 - Air bleed screw
- 10 - Coil drain screw
- 11 - Air filter
- 12 - Mounting bracket support to house the resilient mounts
- 13 - Supply and return plenums, I or U assembly (option)
- 14 - Supply plenums (accessory)

Name plate (fig. 3)

The name plate contains all the information required to identify the unit and its configuration. This plate is placed on the condensate pan insulation. Before contacting us, please note the serial no. and the designation.

- 1 Code
- 2 Serial number
- 3 Unit designation
- 4 Rated motor output
- 5 Motor input current
- 6 Type of coil
- 7 Wiring diagram reference
- 8 Motor speed wiring
- 9 Maximum operating pressure
- 10 Electric heater specifications (if fitted)
- 11 EC declaration no.

IMPORTANT :

This unit may be used by children aged eight and over, and by persons with limited physical, sensory or mental capabilities, or by persons with insufficient experience or knowledge, provided that they are being correctly supervised or provided they have received instructions on how to use the unit in complete safety, ensuring that they have a full understanding of any risks involved. Children must not be allowed to play with the unit. User cleaning and maintenance must not be performed by children.

When this unit is used in an unsupervised environment with children or animals, it is recommended that when wall mounted with 42NC housing, "internal return air grille between feet" (accessories) is used to provide additional protection for filter access. The list of mounting options and accessories is available from your installer or in the product selection documentation.

During normal use, this unit is intended to operate under the following site conditions:

- Maximum altitude: 2000 m,
- Minimum and maximum storage temperature: -20°C/+65°C,
- Minimum and maximum operating temperature: 0°C/+40°C,
- Indoor return air maximum humidity level: 27°C DB (dry bulb) at 65% RH (Relative Humidity),
- Clean interior environment (no corrosive substances present).

The unit requires protection from any form of impact during use. Protection rating IP 20 IK02.

This unit is designed to operate in an overvoltage category II and pollution degree 2 environment, in accordance with IEC standard 664. To ensure a pollution degree 2 environment, the unit must be protected from water and oil splashes, and the dust allowed to settle on it must be limited.

3 - HANDLING



For your safety, wear protective gloves!

Warning : the unit must be handled with care and stored flat. Impacts may cause damage to the frame or the body of the unit and adversely affect its main functions and its appearance.

REMOVING AND REFITTING THE CASING

When installing the unit, the casing must be removed and replaced in its original packaging, to protect it from any risk of scratching. The protective electrostatic casing film must always be removed before the casing is finally repositioned.

To remove the casing (fig. 4):

- **Standard model, return air underneath (42NC):**
Remove the two ¼ turn screws on the lower section of the casing (a). Then swivel the lower section towards you and lift the casing.

- **Front return air model (42NR):**

Remove two ¼ turn screws and the grille. This gives access to the two ¼ turn screws in the casing; remove them, then swivel the lower section towards you and lift the casing.

Note : if the unit is equipped with a control with flush-mounted terminal, remember to disconnect the quick-release connector, accessible on the side on top of the electrics box.

To refit the casing (fig.4)

- Position the casing so that it leans at an angle (lower part towards you) making sure that the central lug (B) is correctly centred
- Adjust the rear lugs on the rear panel of the frame (A),
- Return the casing to an upright position so that the brackets on the frame clip into the feet on the casing (C).

INSTALLING THE UNIT

The unit should preferably be lifted by its mounting holes and **never** by the condensate pan, the plenums or the collars. (42NI or 42NU model) It is possible to carry out the installation using a fork-lift truck, as long as care is taken not to damage the unit.

4 - MECHANICAL CONNECTION



To protect against injury or damage to the unit or room, the hydraulic connections must be made by qualified personnel only.

Horizontal model:

The unit is installed in the ceiling.

The unit must be suspended from the ceiling using 4 threaded rods either 6 mm or 8 mm in diameter (not supplied), which are fixed to the unit's 4 support brackets using anti-vibration resilient mounts (optional, Fig. 5, a) or a nut/washer assembly positioned on either side of the mounting bracket (Fig. 5, b).

For a 42ND or 42NI or 42NU model, ensure that the suspended ceiling panels can be easily removed and that there is enough space to carry out maintenance and servicing operations.

For the 42NU model, the supply plenum must also be secured to the ceiling using a 6 mm or 8 mm threaded rod (not supplied), to be attached to the support bracket using a resilient mount (accessory, fig. 5, a) or a nut/washer assembly placed either side of the support bracket (fig. 5, b).

Note: CARRIER strongly recommends the use of antivibration resilient mounts when securing the bracket, in order to reduce the transmission of vibrations through the building structure during operation.

Vertical model:

- Fixed to the wall by 4 screws
- Placed on the ground with support feet or air recovery unit (model with air recovery underneath)
- Placed directly on the ground (42NR model with air recovery on the front)

Warning:

- All units must be perfectly level.
- Check that there is a sufficient gap between the back of the unit and the wall (horizontal model, assembly without air recovery unit) or the floor (vertical model, assembly without feet) (min. 100mm) (fig. 6) if the air recovery is not ducted.
- If a room thermostat control is provided, place it on an inside wall (not behind a door) at a height of 150 cm from the floor. Keep it away from sunlight and all sources of heat.

5 - AIR CONNECTIONS

Air quality:

Comfort units are not designed to control the humidity of outside air. Fresh air handling must be provided by an independent system in accordance with accepted engineering practice (see CARRIER's ranges of air handling units).

Warning: on all models with plenums, all collars must be connected. None must be capped, either at the supply or return air.

Fresh air knockout

The fresh return air must be taken from air pretreated by an air handling unit which complies with European regulation No. 1253/2014.

Under no circumstances may fresh air from outdoors be connected directly to the unit.

Fitting and adjusting fresh air collars (accessory)

- Remove the washer from the pre-punched panel by cutting the attachment points.
- Fasten the collar with or without controller using the 4 screws supplied.
- Either remove or leave on the shims needed to obtain the desired flow rate. The flow rate ranges are given on the label on the casing.
- 2 shims for minimum flow, 1 shim for medium flow, no shims for maximum flow.
- The pressure difference must be between 50 and 100 Pa in order to obtain the desired flow rate.
- Maintain the controller in the "BAS" (down) position.

6 - HYDRAULIC CONNECTIONS

The coils are fitted with a female hydraulic connection, a flat face swivel nut (diameter 1/2" and 3/4", depending on the size) and sealing gaskets (supplied with the unit), an air bleed valve and a drain valve.

Water always flows into the bottom of the coil and exits at the top.

To install a control valve with a flat face (fig. 8):

- **Two-way valve:** screw the valve and gasket provided directly on the hydraulic connections at the coil intake (at the bottom):
 - 2-way valve, 2 pipe version (fig. 8a)
 - 2-way valve, 4 pipe version (fig. 8b)
- **Three-way valve with integral bypass:** add the copper pipe before fitting the valve:

4-way valve, 2 pipe version (fig. 8c)

4-way valve, 4 pipe version (fig. 8d), onto the coil cooling connection.

Installation

Carrier recommends a default tightening torque of 7 N.m (max. 18 N.m) to avoid any damage to the couplings and the exchanger.

During connection, always use a holding wrench on the component being connected to ensure the header is not twisted.



The maximum allowable differential pressure for our valves (open or closed) is 100 kPa. **CARRIER** recommends not exceeding 60 kPa.

For a unit pre-fitted with control valves, check the tightness of the couplings/valves before/after connecting to the network.

Recommendations on hydraulic connections

The design of a hydraulic network is crucial to the correct operation of the system. Drain valves should therefore be placed at the appropriate points and in sufficient number. In addition, strainers should be fitted, as well as drains at circuit high points, balancing tees on each unit and, if necessary, discharge valves.

Pressure safety:

The installation must be protected against any risk of pressure surges. Special care must be taken to protect against the risks linked to expansion of the energy transfer fluid and to the total hydrostatic pressure.

Filtration:

An efficient filtration system (recommended mesh size of 0.5 mm) should be fitted on the supply water and return water lines.

Flushing:

The system must be flushed completely and filled with treated water to prevent the build-up of scale or sludge in the circuit. When flushing the system, open the valve on the unit to prevent any sludge or scale entering the coil:

- If the power has not yet been switched on, the valve will be open.
- If the control has already been switched on, the valve will switch to «normally closed» operation. The valve must be opened either via the control device or by removing the valve actuators.

Filling:

Drain the coils during system start-up.

Water quality recommended for water coils:

It is recommended to carry out a bacteriological analysis (detection of ferrobacteria, bacteria producing H₂S and reducing sulfates) and a chemical analysis (to avoid problems with scaling and corrosion) of the water.

- Total hardness (French scale) 10 < TH < 15
- Chloride [CL⁻] < 10 mg/l
- Sulfate [SO₄ 2⁻] < 30 mg/l
- Nitrate [NO₃ -] = 0 mg/l
- Dissolved iron < 0.5 mg/l
- Dissolved oxygen 4 < [O₂] < 9 mg/l
- Carbon dioxide [CO₂] < 30 mg/l
- Resistivity 2000 < Resistivity < 5000 Ωcm
- pH 6.9 < pH < 8

Operating limit recommendations:

Cooling coil inlet minimum water temperature: **5°C**

Heating coil inlet maximum water temperature (2-pipe application without electrical heater): **90°C**

Heating coil inlet maximum water temperature (2-pipe application with simultaneous electrical heaters): **55°C** (min. air flow rate = 200 m³/h)

Heating coil inlet maximum water temperature (4-tube application): **90°C**

Maximum operating pressure: **16 bar**

Indoor return air min./max. temperature: **+0°C/+40°C**

Indoor return air maximum humidity level: **27°C DB** (dry bulb) at **65% RH** (Relative Humidity).

Operating recommendation:

To prevent any inopportune opening of the thermo-actuators, the temperature of the air surrounding the thermo-actuators should be kept at no higher than 50°C. This risk must be taken into account, especially for units in a confined space (e.g. units installed in a suspended ceiling).

CARRIER shall not be liable for damage to valves caused by faulty design of the hydraulic supply network or incorrect commissioning.

To protect against the risk of condensation when using chilled water, lagging should be placed along the entire length of pipes and the ends must be completely sealed. When using the water coil and electric heater, we advise against using cross-linked polyethylene (PEX) pipes to supply water to the unit. This is because overheating of the electric heater could cause the water temperature to rise briefly. This could cause the rapid deterioration of the PEX pipe near the unit and cause it to burst. We recommend using stainless steel braided (or equivalent) hoses for hydraulic connections.

7 - CONDENSATE DRAIN PAN

The unit is equipped with a sloping polymer pan which does not retain water, fitted with a Ø22 mm external drain end piece and a plug.

When the unit is delivered, the pan is blocked on both sides (2 plugs), so it is therefore imperative that the plug is removed from the side where the hydraulic connection is to be made.



If the hydraulic connection side is switched, do not forget to refit the plug to the other side.

The connection can be made on the left or right-hand side of the unit. The drain hose can be separate for each unit or corrected to a main drain hose. Use a translucent and/or rigid drain pipe with a minimum slope of 1 cm/m, with a constant gradient along its whole length. Install a siphon trap measuring at least 5 cm to prevent unpleasant gases or odours venting from the drain.

An auxiliary pan must be installed on the connection side using the 2 screws (fig.09a).

8 - CONDENSATE DRAIN PUMP

The **units** can be equipped with a condensate drain pump.

Its technical specifications are as follows:

- Maximum flow of 8.5 l/h for a pumping height of 2 metres and a horizontal pipe length of 5 metres.
- Maximum flow of 7 l/h for a pumping height of 4 metres and a horizontal pipe length of 5 metres.

The operation points are provided in the table below.

Table of actual flow rates for the pump connected to a PVC pipe with an internal diameter of 6 mm.

Pump performance: Water flow rate in litres per hour (-15% / +20%)				
Discharge height	Horizontal length of the discharge pipe			
	5 m	10 m	20 m	30 m
1 metre	10,4	9,1	8,3	7,3
2 metres	8,5	7,8	7	6,4
3 metres	7,9	7,1	6,3	5,8
4 metres	7	6	5,3	4,9

Warning: make sure that the flow of water to be discharged in the thermal selection is suitable for your application

Note: this accessory must always be used with a valve control device, to ensure valve control of the high safety device when the valve is closed (closure of the condensate drains).

Under operating conditions outside of the recommended temperature and relative humidity ranges ("operating limit recommendations" section on page FR-7), the discharge pipe must be insulated to prevent the formation of condensation, which could damage the installation and the pump. We recommend the use of a crystal clear translucent PVC pipe with an internal diameter of 6 mm and an external diameter of 9 mm. The tightness of the connections to the pump must be verified using a clamp

Fitting the pump, vertical model (fig.10) and horizontal model (fig.11):

If the pump is delivered separately as a kit, screw the pump onto the unit using the 2 mounts (a) and 2 screws (b), and connect the hose to the condensate pan (d). Connect a clear drain hose (not supplied) (c) with an interior diameter of 6 mm between the pump outlet and the wastewater pipe.

Finally, connect the power cables (e) as shown in the diagram supplied with the unit.

Caution: this hose should not be pinched or touch the unit or any other external component. Wire as indicated on the attached circuit diagram.

9 - ELECTRICAL CONNECTIONS



- Ensure that the power supply to the unit is disconnected before carrying out any work.
- Only personnel qualified to perform electrical and maintenance work may make electrical connections.

As indicated on the data plate, the unit must be connected to a single-phase 230V power supply (230/1/50Hz-60Hz).

	Motor speed	AC Motor Asynchronous (230V/50Hz)								EC Motor Brushless (230V/50Hz)					
		115/ 135	215/ 235/ 245	236	315/ 325/ 335/ 345	336	435/ 445	535/ 545	635/ 645	119/ 139	219/ 239/ 249	319/ 329/ 339/ 349	439/ 449	539	639/ 649
Power input during operation (W)	V5	33	58	-	88	-	106	108	135	11	25	32	77	90	100
	V4	31	41	-	67	-	93	94	114	9	15	22	63	80	75
	V3	29	36	98	52	117	80	79	99	6	11	13	36	42	55
	V2	27	31	82	42	91	72	72	88	5	8	7	21	26	32
	V1	26	27	59	35	66	63	63	77	4	5	3	11	13	16
Max. absorbed current (A)	V5	0,14	0,25	-	0,38	-	0,46	0,47	0,59	0,11	0,2	0,29	0,62	0,71	0,74
	V4	0,13	0,18	-	0,29	-	0,4	0,41	0,5	0,09	0,13	0,2	50	0,62	0,67
	V3	0,13	0,16	0,42	0,23	0,5	0,35	0,34	0,43	0,07	0,11	0,13	0,3	0,35	0,44
	V2	0,12	0,13	0,35	0,18	0,39	0,31	0,31	0,38	0,06	0,09	0,08	0,19	0,21	0,27
	V1	0,11	0,12	0,26	0,15	0,28	0,27	0,27	0,33	0,06	0,06	0,06	0,11	0,13	0,16

The unit must be earthed. Carrier shall not be liable for incidents resulting from faulty or non-existent earthing. Always follow the circuit diagram delivered with unit.

To access the electrical terminal block:



Disconnect the unit from the electrical power supply.

Remove the casing (fig. 4) for 42NC or 42NR version units.
Remove the screw from the electrics box enclosure (fig.12b).

Modifying the motor speeds:

Always use an electrician's flat-blade screwdriver when performing cabling operations.

The **42NC/ND** range offers a choice between two types of motor technology: asynchronous and brushless (low consumption).

• The asynchronous motor:

To optimise the unit's performance and depending on the type of control used, the unit has five speeds numbered V1 to V5 connected to the terminal block in the electrics box (V1= low speed and V5= high speed).

The customer must wire the speeds for the thermostat at the top of the terminal block between V1 and V5.

To open a connection point and change the cabling (fig.12c).

- Place the end of a flat-blade screwdriver in the hole located just below the cable to be removed, release the cable and move it to the marker for the desired speed.

- Place the screwdriver back in the hole just below the desired speed, insert the cable and remove the screwdriver; this ensures a secure contact.

Repeat the procedure for the remaining customer speeds.

WARNING: the wires coming from the motor and connected to terminals V1 to V5 must never be interconnected.

WARNING: it is essential to refit the electrics box cover once all the cabling and adjustment operations are complete.

• The brushless motor:

This has a motor speed electronic control unit which uses a 0-10 V control signal.

The 0-10V setpoint voltage information is issued by the controller itself. Refer to the operating and configuration instructions supplied by the manufacturer.

Warning: If electrical heaters are used, for unit sizes 219, 439 and 539, the lowest speed setting should never be below 3.5 V.

Unit size	1		2		3		4	5
Model 42NC/ND/NR/NI/NU	119	139	219	239	319	339	439	539
Minimum voltage for EC fan	2 V	2 V	3,5 V	2 V	2 V	2 V	3,5 V	3,5 V

To prevent any risk of damage, never connect several asynchronous or brushless fan coil unit motors in parallel for the same thermostat.

IMPORTANT NOTE: BRUSHLESS MOTOR

The electrical connection for the units must be made in compliance with international standard IEC 60364 (Electrical Installations for Buildings). The leakage current for all our units complies with the requirements of standard IEC 60335-2-40 (Household and similar electrical appliances - Safety):

- Complete unit (with electrical heaters) equipped with a multi-speed motor: maximum leakage current = 2 mA.
- Complete unit (with electrical heaters) equipped with an EC motor (Brushless technology): maximum leakage current = 3.5 mA.

Electromagnetic compatibility in accordance with Emission standard 61000-6-3 EN 550141-1, tool class and Immunity 61000-6-1 (Residential, commercial and light industry class).

Important: the unit's compliance with the above standards does not guarantee the compliance of the installation as a whole (several other factors not relating to the unit may be involved). As a result, the installer must observe the applicable recommendations in order to guarantee compliance.

9 - ELECTRICAL CONNECTIONS

Electrical safety:

To ensure user safety, earthing is compulsory.


The installation must be equipped with a device to protect against earth faults.

A disconnect device must be built into the installation between the supply and the 230 VAC power network, and must be easy to access. The disconnect device must simultaneously disconnect the two poles (live and neutral), and have a distance of at least 3 mm between the contacts, in compliance with the installation instructions.

The mains power cable must have 3 conductors (blue, brown, green/yellow) and its cross section and type must comply with the specifications set out by the applicable EN or IEC standard. Refer to the selection sheet or the name plate to determine the maximum input current. The cable must be fed into the box via the circular hole fitted with a protective grommet and secured in the dedicated strain relief. Its maximal diameter must be 12 mm. It must be clamped at low speed with a torque not exceeding 0.8 Nm.

Connection

Connect the electrical connections to the connectors as per the wiring diagram below, and lock the wires using the special cable grommets.

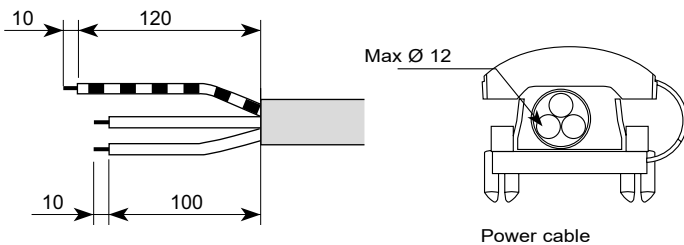

IMPORTANT: Connect the earth before making any other connections.

Check that the stripped section of the GREEN/YELLOW cable is longer than the others.

The electrical connection cables must be type H05 VVF with PVC insulation in accordance with the standard EN 60335-2-40. The power cable must have a minimum cross section of 2.5 mm².

If the indoor unit is equipped with electric heating, there is just one power supply; in this case, ensure that the power cable is correctly sized.

General safety instructions for units with electric heating elements:

- Fan-controlled operation: the electrical heater (1 or 2 elements) must always be fan-controlled. Power to the electric heating elements should be cut and post-ventilation activated whenever the fan motor assembly is stopped intentionally or unintentionally.
- To ensure the hot water and electrical heaters work correctly when used simultaneously, we recommend only low temperature settings are used to ensure our safety devices operate correctly.
- Units equipped with heaters are protected against accidental overheating by 2 temperature limiter thermostats (fig.12a); these are always fitted on the electrics box side. Do not reset these thermostats until the potential causes of the overheating have been checked:
 - > Powering up without ventilation.
 - > Filter partially clogged.
 - > Coil and fan stopped simultaneously by control.

Warning: Never connect several fan coil unit motors in parallel on the same thermostat.

If actuated using a thermostat or controller, you must refer to its technical documentation. You have sole responsibility for checking its capacity to accept the output of the electrical heater. If the selected controller (thermostat or controller) and/or relay is missing or inadequate, there is a risk of electrical overload and a risk of a thermal event. Under no circumstances can the manufacturer be held responsible for direct or indirect damage caused by or in connection with the absence or incorrect choice of relay and/or thermostat.

10 - CARE AND MAINTENANCE

The unit must be serviced periodically between the heating and cooling seasons. In particular, components prone to clogging (filter, condensate pan, coil, condensate pump, etc.) must be checked.



Ensure that the hydraulic and power supplies to the unit are disconnected before carrying out any work and wait at least 20 mins before working on or near the heaters.



For your safety, wear protective gloves to prevent the risk of burns from hot pipes.

AIR FILTER MAINTENANCE

The filter is key to ensuring the unit runs correctly. Without it, there is a risk the heat exchange coil will become clogged. We recommend changing the filter between each operating season. For more frequent maintenance, the filter can be cleaned by running a vacuum attachment in the opposite direction to the flow of air. Check the filter's appearance regularly. The required cleaning frequency will depend on where the unit is installed and its operating conditions.

For a model equipped with a plenum at the air recovery, the unit may be supplied without a filter at the customer's request. The customer must ensure at least G3 upstream filtration. Failure to do so will lead to loss of the motor warranty cover. The filter should never be cleaned using water or detergent products, which could cause the spread of bacteria.

Standard air recovery (fig.13):

Horizontal model:

Removing the filter from the rear of the unit: swivel the runners (a) and slide the filter (b) towards the bottom, freeing it from the runners.

Vertical model:

Removing the filter from the inside of the unit: swivel the runners and slide the filter towards you, freeing it from the runners.

Model 42NI or 42NU (fig.14):

Remove the screws located at the edge of the plenum (a) and partially unscrew the screws on the sides of the plenum (b). Slide the lower plenum panel (c) to give access to the rear section of the unit. Swivel the runners (d) and release the filter (c) by pulling it downwards.

Front air recovery (fig.15):

Vertical model:

To remove the filter, swivel the runners (a) and release the filter (b) by pulling it upwards.

Horizontal model:

To remove the filter, swivel the runners and release the filter by pulling it towards you.



When refitting the filter, ensure the runners are securely clipped in to lock them.

Front air recovery, cased model (fig.16):

Turn the 2 x 1/4 turn screws (a), swivel the grille and remove the filter (b) from its housing.

FAN MOTOR ASSEMBLY MAINTENANCE

Periodically check the cleanliness of the impellers and the motor. If necessary, clean them using a vacuum cleaner, taking care not to damage them. No special maintenance is required for the electric motor.

Removing the fan motor assembly (fig.17):

- Disconnect the wires from the motor (on the terminal) after the unit has been powered off.
- Remove the air filter (see filter maintenance).
- Remove the front fan motor assembly panel (a).
- Remove the 1/2 scroll(s) (b) by unclipping the 2 lugs, with a tool (screwdriver) (c) and the 2 disassembly clips (d).
- Unscrew the motor retaining screw (e).
- Remove the motor/impeller assembly from the unit.

To reassemble the fan motor assembly, perform these steps in the opposite order.

CONDENSATE DRAIN PAN MAINTENANCE

The condensate pan must be kept clean. Clean the plastic pan and its connection fittings completely with water-based non-abrasive cleaners.

The pan must be removed for cleaning by unscrewing the 2 side screws and the 2 front screws from the pan (fig.18).

Also check periodically that the drain pipe is not blocked, bent or kinked, and has the required gradient of -0°/+2 along its entire length.

Before starting up the unit, check that the water flows properly into the condensate pan by pouring some water into it.

EXCHANGER COIL MAINTENANCE

A clean coil is crucial to the efficiency of the unit. If necessary, clean the coil with a vacuum cleaner, taking care not to damage the fins.

If the coil must be disassembled on account of a leak:

- Disconnect the water coil and the condensate drain.
- Remove the fan motor assembly (see the section above)
- Remove the condensate pan (see the section above)
- Unscrew the side screws from the exchanger coil and remove it from its housing between the unit's support feet.

Note: The condensate pan can be removed without having to remove the heat exchange coil.

CASING MAINTENANCE

To maintain the appearance of the unit, wipe it clean with a slightly soapy, damp sponge and buff it with a soft, dry cloth. Use water-based non-abrasive cleaners.

11 - TESTS AND WARRANTY

All our units are tested and proven before leaving the factory.

They are guaranteed against all manufacturing defects. Carrier shall not be held liable for any type of corrosion. Carrier's warranty does not cover damage resulting from incorrect electrical wiring, inadequate electrical or thermal protection or failure to use an air filter.

Carrier's warranty on motors is limited to the terms of warranty extended by its supplier.

Under no circumstances must the fitter carry out work on the motor. This will invalidate any future claims on the warranty.

12 - CE CERTIFICATE OF CONFORMITY



Declaration of Conformity UE

This unit complies with the provisions of European Directives:

- 2006/42/EC (Machinery)
- 2014/30/EU (EMC)
- 2011/65/EU (RoHS)
- Electronic Equipment Regulations 2012
- 2009/125/EC (Eco Design) and regulations 327/2011/UE
- REGULATION (EC) No 1907/2006 (REACH)



UK Declaration of Conformity

This unit complies with the requirements of:

- Supply of Machinery (Safety) Regulations 2008
- Electromagnetic Compatibility Regulations 2016
- The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012
- The Ecodesign for Energy-Related Products and Energy Information Regulations 2019, and following amendments
- UK REACH Regulations 2019

UK Importer:

- Toshiba Carrier UK Ltd, Porsham Close, Roborough, Plymouth, PL6 7DB

The quality management system of this product's assembly site has been certified in accordance with the requirements of the ISO 9001 standard (latest current version) after an assessment conducted by an authorized independent third party.
The environmental management system of this product's assembly site has been certified in accordance with the requirements of the ISO 14001 standard (latest current version) after an assessment conducted by an authorized independent third party.
The occupational health and safety management system of this product's assembly site has been certified in accordance with the requirements of the ISO 45001 standard (latest current version) after an assessment conducted by an authorized independent third party.
Please contact your sales representative for more information.

Order No.: EN7577691-04, 10.2024 - Supersedes order No.: EN7577691-03, 07.2023.
The manufacturer reserves the right to make changes to the product specifications without notice.

Carrier, Rte de Thil - 01120 Montluel, France.
Printed in the European Union.

Техника для климата

Доставляем оборудование по всей России от 3 дней транспортными компаниями. Реализуем проекты в десятках регионов — от Калининграда до Владивостока.

9600+

объектов и поставок

от 1 дня

отгрузки в транспортную компанию

Технические данные файла

Документ: Инструкция по монтажу Carrier 42NC/42ND/42NR/42NI/42NU: фанкойлы (EN7577691), 10.2024

Идентификатор библиотеки: LIB-003930

Исходный файл: carrier-en7577691-04-iom-10-2024-42nc-nd-nr-ni-nu-instruktsiya-montazh.pdf

SHA-256 оригинала: 9c024b28ed15ed385ceb3eae5706bd2f2c098ea2cebd4ecf2744dd67e2acd33b

Постоянная ссылка:

<https://iclim.ru/library/carrier-en7577691-04-iom-10-2024-42nc-nd-nr-ni-nu-instruktsiya-montazh.pdf>

Копия сформирована: 02.10.2026 06:17 UTC